


Instructions


1. Use the large square pegboard for your project. If you're using a clear pegboard, slide the actual-size pattern underneath it. Place all the beads for the design.
2. Cover the completed design with the ironing paper. Keeping the iron level, gently iron the beads in a circular motion for about 10 seconds to fuse the beads evenly. Ironed properly, the beads will still have an open center. On a 3-D project such as this, DO NOT OVER-IRON the beads as it will make the centers of the beads close and can make assembly difficult.
3. Once the design is cool, peel off the ironing paper. Lift your design from the pegboard; flip the design over and repeat step #2. Your pegboard and ironing paper are reusable.

Bead Color/# Needed:


- Light Pink - 98
- Pink - 44
- Toothpaste - 138
- Light Green - 102
- White - 126

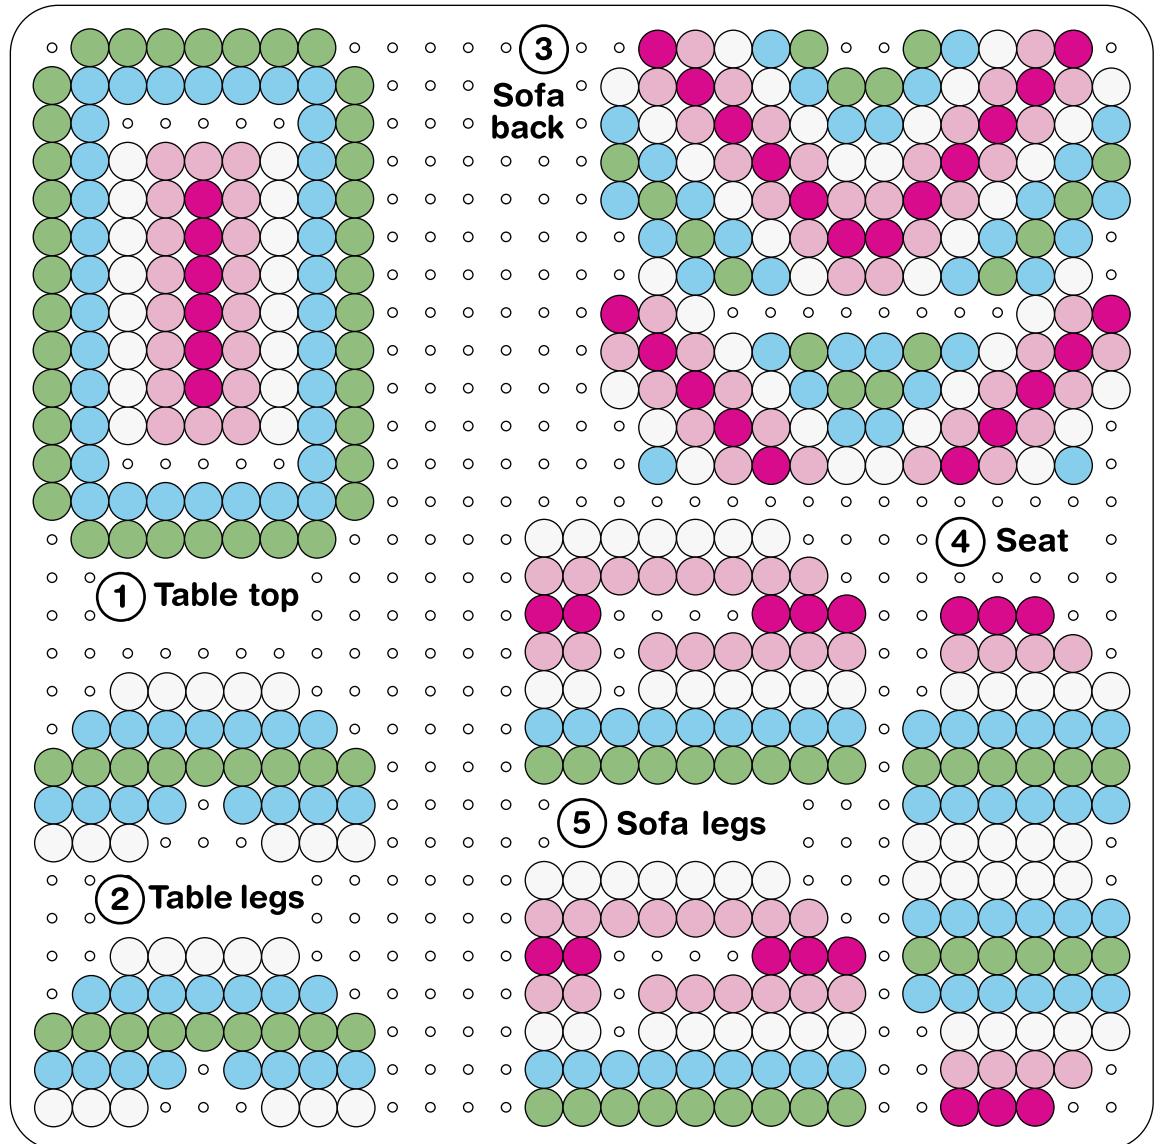

Continued on next page

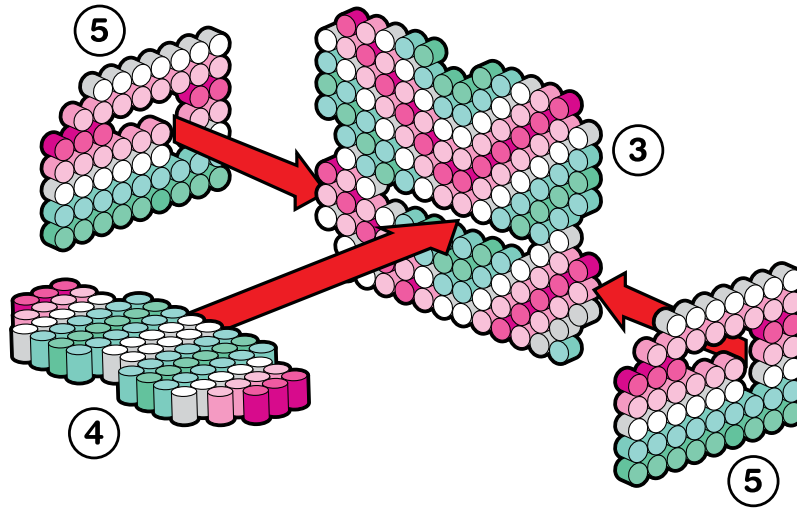ASSEMBLY—All assembly is tab and slot.

For the sofa, insert the tab of the seat into the sofa back with the pieces at right angles to each other. Slide the sofa legs onto the assembled seat/back.

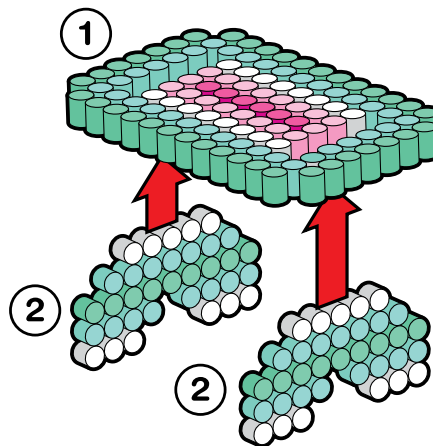

For the table, insert the tabs of the legs into the slots of the table top with the pieces at right angles.