




Instructions

1. Using the small square pegboard, place all the beads for your project.
2. Cover the completed design with the ironing paper. Keeping the iron level, gently iron the beads in a circular motion for about 10 seconds to fuse the beads evenly. Ironed properly, the beads will still have an open center. On a 3-D project such as this, DO NOT OVER-IRON the beads as it will make the centers of the beads close and can make assembly difficult.
3. Once the design is cool, peel off the ironing paper. Lift your design from the pegboard; flip the design over and repeat step #2. Your pegboard and ironing paper are reusable.

NOTE: You will also need about a half yard of clear lacing to assemble this project.


Bead Colors/Qtys Needed:

- Hot Coral - 20
- Neon Orange - 10
- Rust - 33
- Tan - 65
- Light Brown - 6
- Brown - 140
- Grey - 70

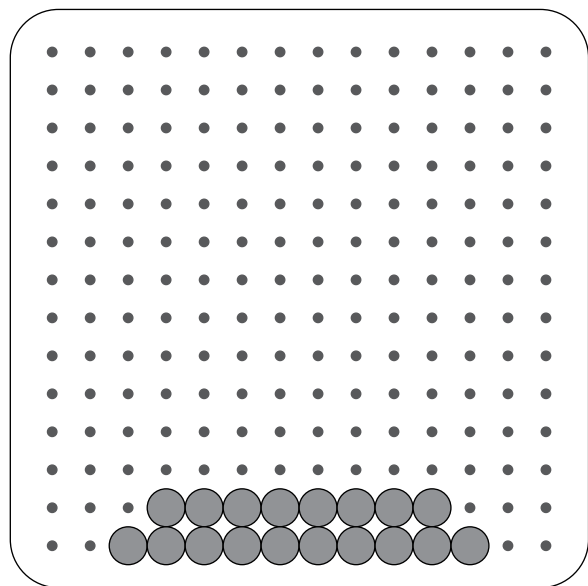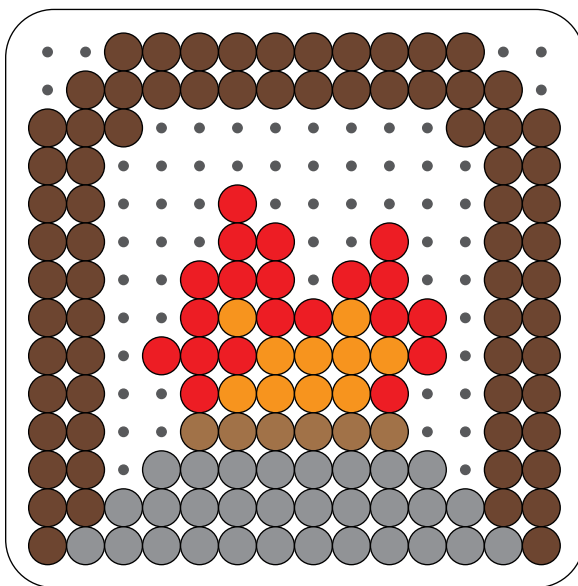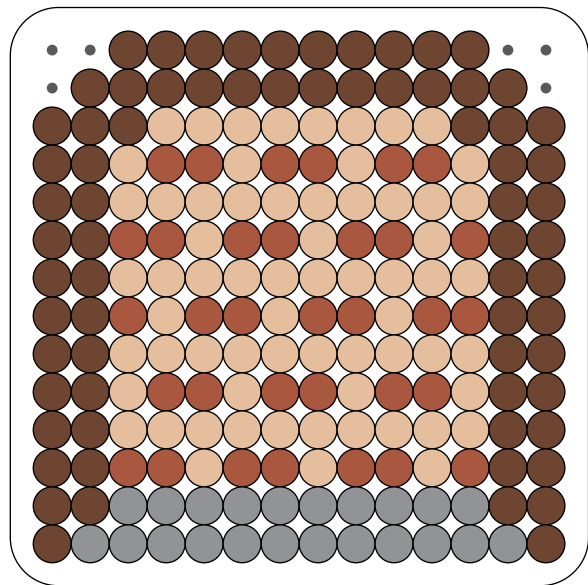

Continued on next page

Assembly

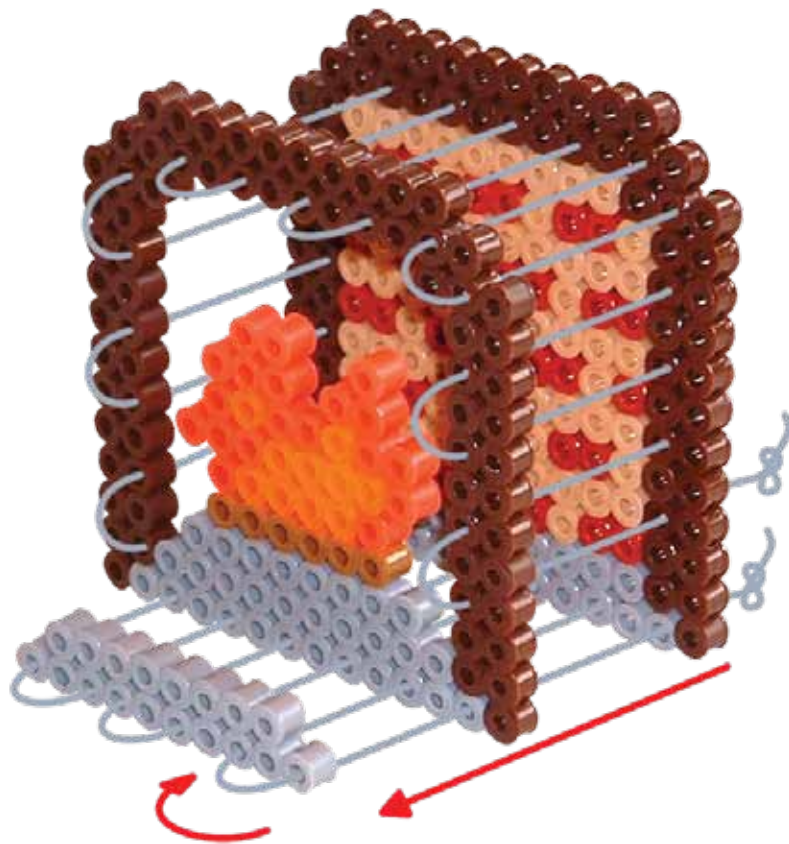

Align the pieces as shown and use the clear lacing to attach them.