



YOU WILL NEED:

Pegboard:

Small square

Other:

Ironing paper

Iron





Self-adhesive magnets

Bead Colors:

- Bubblegum - 162
- Pink - 158
- Red - 109
- Kiwi Lime - 30
- Toothpaste - 109
- Parrot Green - 158
- Pastel Lavender - 28
- Blueberry Cream - 32
- Purple - 276
- White - 120



Instructions

1. Place your beads on the pegboards as shown. If you are using a clear pegboard, slide the actual-size pattern underneath it.
2. Ask an adult to fuse your designs—see page 2 for further instructions.
3. Assembly: Attach self-adhesive magnets to the back of each design to display on a locker or refrigerator.

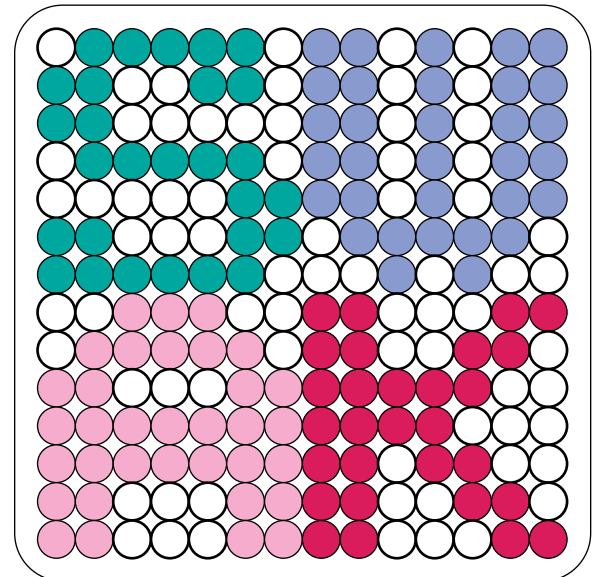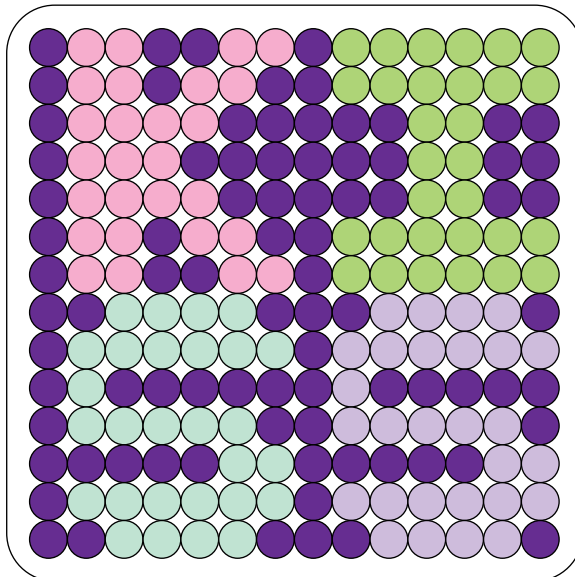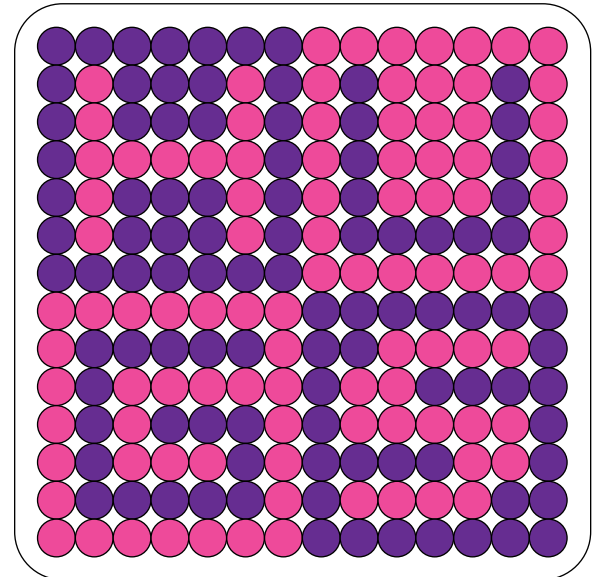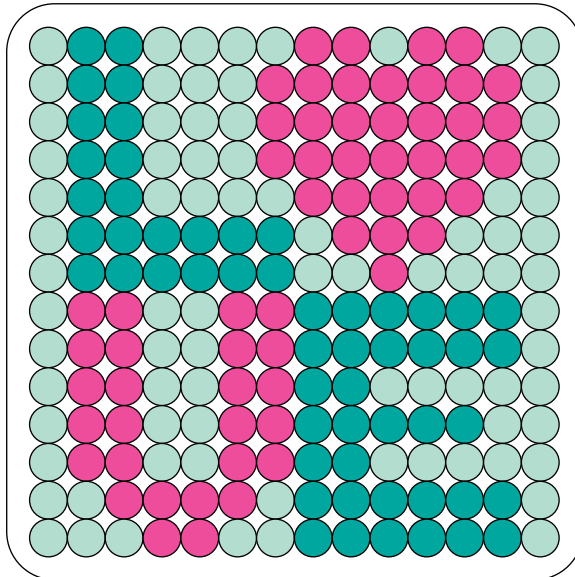

Bead Colors:

-  Bubblemum
-  Red
-  Parrot Green
-  Purple
-  White

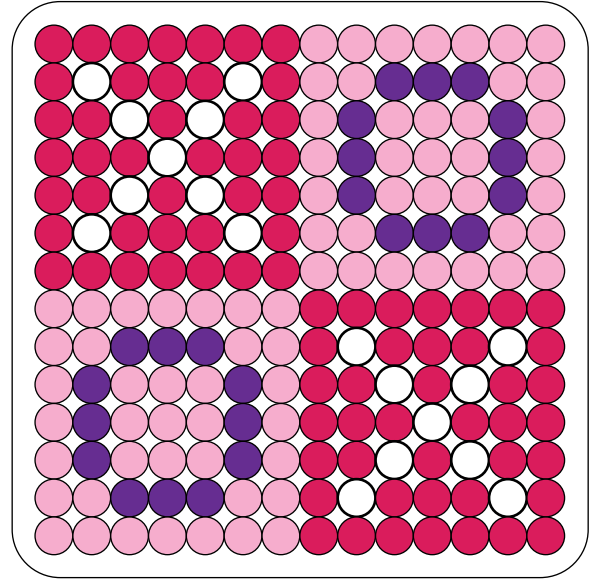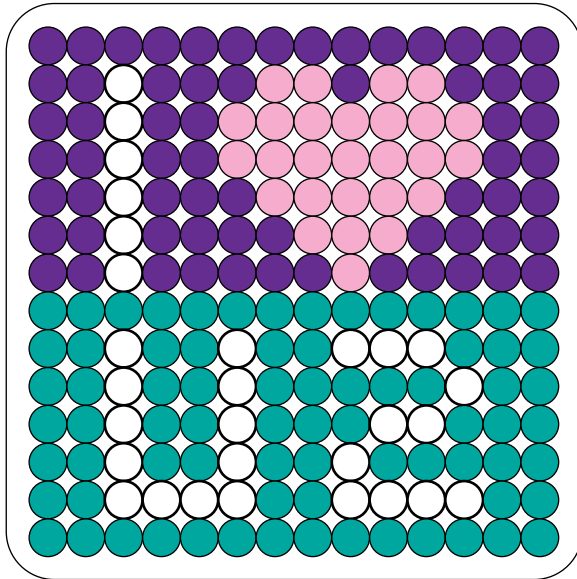

Fusing Instructions—Only Adults Iron



1. Place your pegboard on a flat, heat-safe surface.
2. Set a household iron to the medium setting. Place ironing paper over the pegboard. In a circular motion, begin to iron the project. Do not press down with the iron. As the beads begin to fuse, you will see circles of the beads start to show through the paper. When ironed properly, the beads will still have an open center. Let the design cool.
3. Remove the paper and bead design from the peg board. Flip the design over to expose the non-fused side. Repeat step two. Let cool completely.

NOTE: Beads need heat for about 10-20 seconds per side to fuse evenly. Lift the paper occasionally to see how the beads are fusing. Depending on the size of the project, additional heating time may be required.