




Instructions

1. Use the large square pegboard for your projects. If you're using a clear pegboard, slide the actual-size pattern underneath it. Place all the beads for the design.
2. Cover the completed design with the ironing paper. Keeping the iron level, gently iron the beads in a circular motion for about 10 seconds to fuse the beads evenly. Ironed properly, the beads will still have an open center.
3. Once the design is cool, peel off the ironing paper. Lift your design from the pegboard; flip the design over and repeat step #2. Your pegboard and ironing paper are reusable.



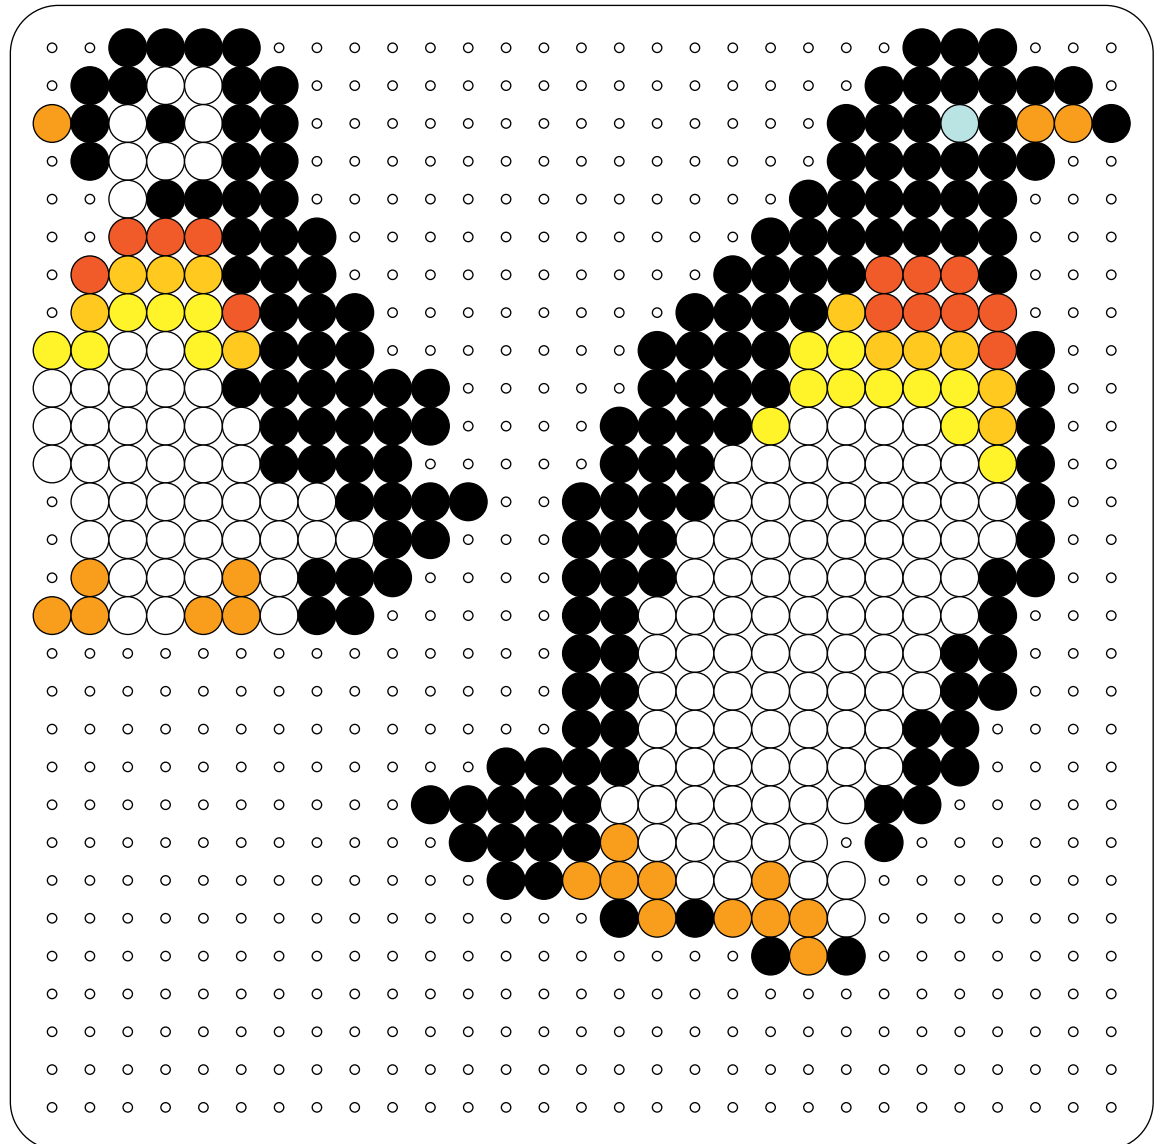

Bead Color/# Needed:


- Hot Coral - 13
- Orange - 19
- Cheddar - 11
- Yellow - 16
- Toothpaste - 1
- Black - 171
- White - 141



Continued on next page


Bead Color/# Needed:

-  Pink - 1
-  Toothpaste - 25
-  Light Brown - 144
-  Brown - 56

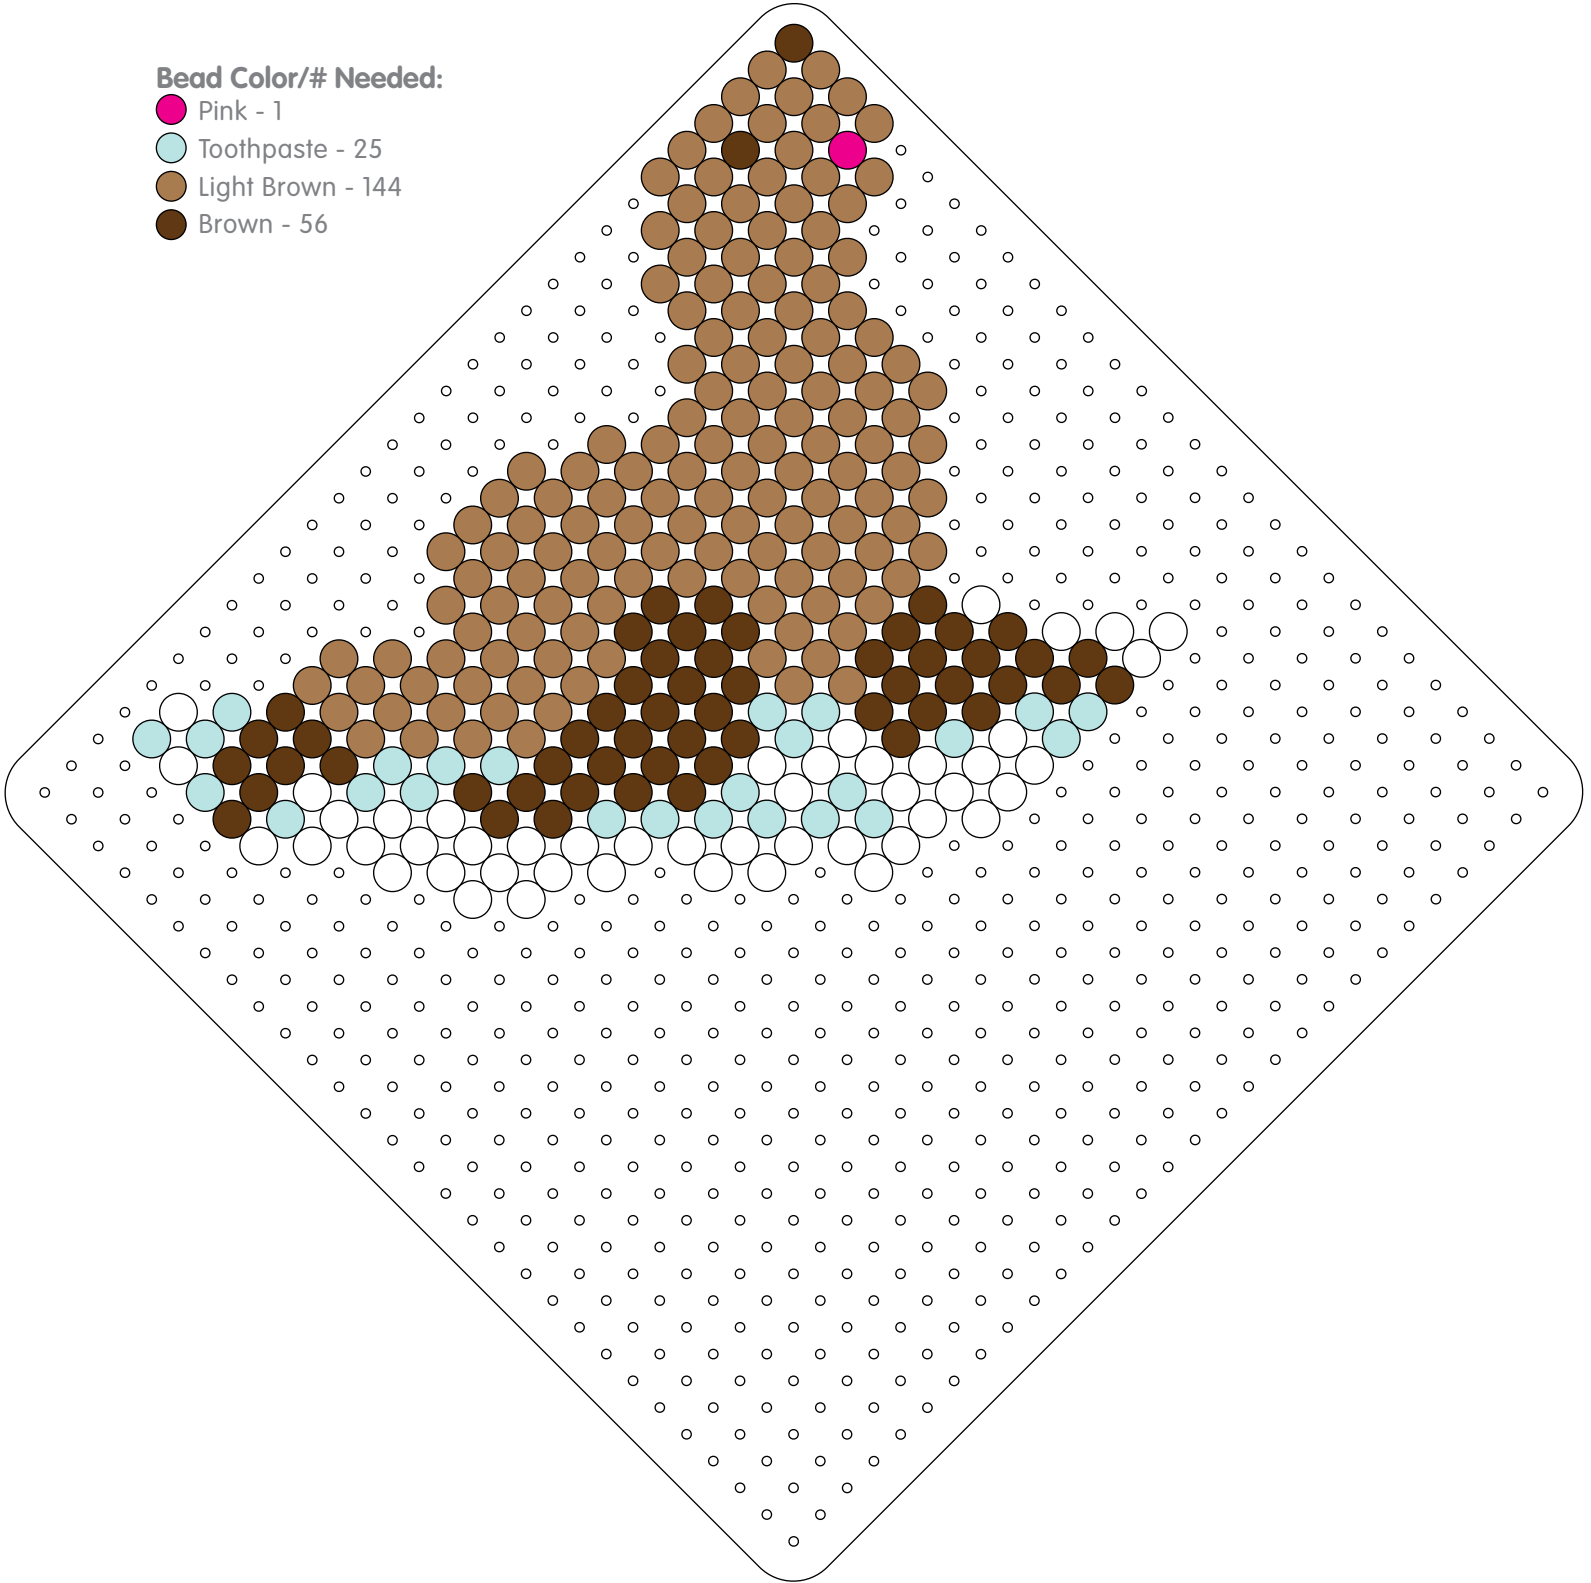




Continued on next page

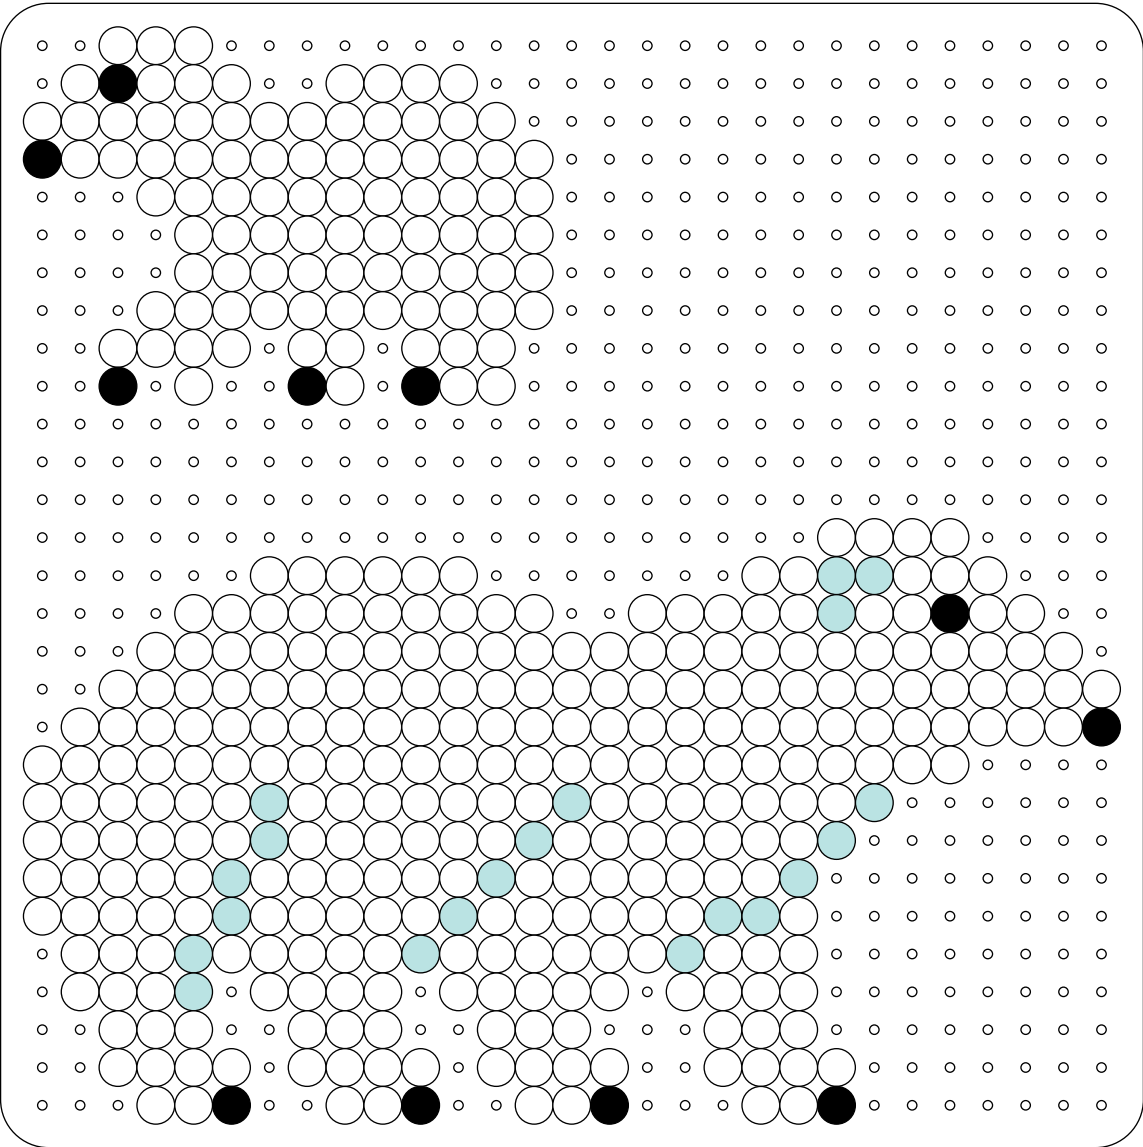Warning: Parents - the ironing must be done by an adult only. Some irons may emit steam. Please keep children at a safe distance.



Bead Color/# Needed:

-  Toothpaste - 20
-  Black - 11
-  White - 373