## **Can Cozies**




1






You will also need craft glue to complete your projects.

## Instructions

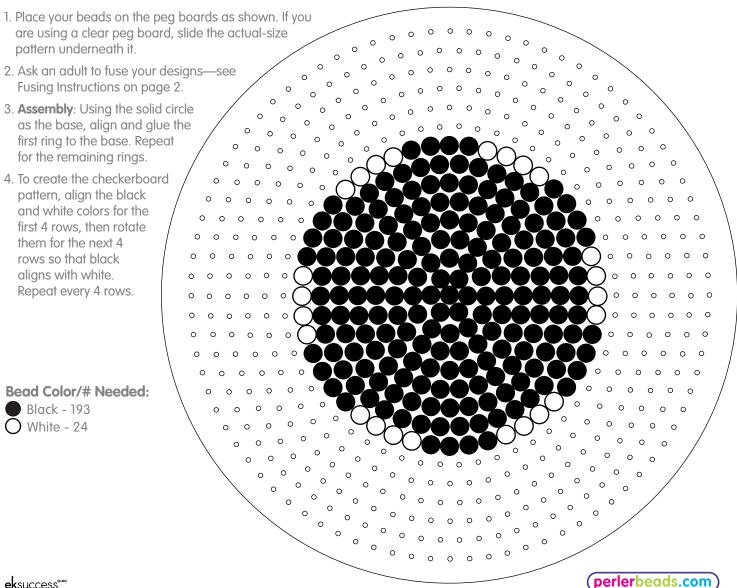

**Can Cozies** 



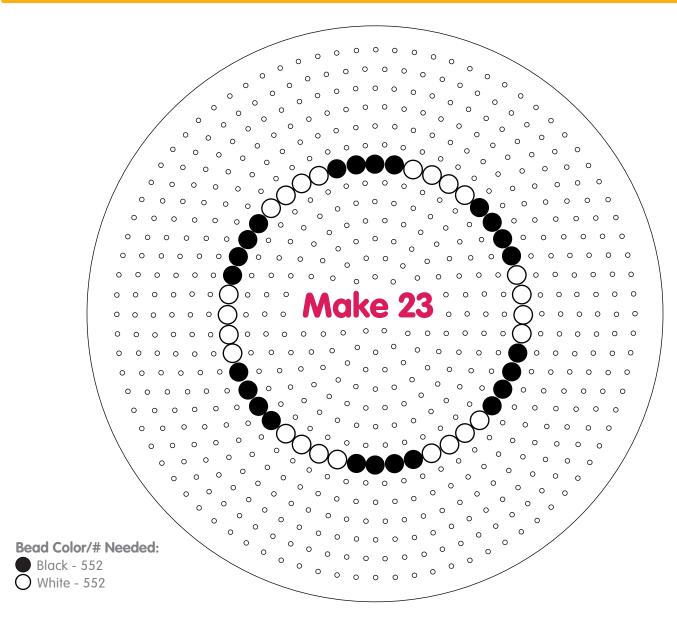

## Fusing Instructions—Only Adults Iron



- 1. Place your peg board on a flat, heat-safe surface.
- 2. Set a household iron to the medium setting. Place ironing paper over the peg board. In a circular motion, begin to iron the project. When ironed properly, the beads will still have an open center. Let the design cool.
- 3. Remove the paper and bead design from the peg board. Flip the design over to expose the non-fused side. Repeat step two. Let cool completely.

Note: Beads need heat for about 10-20 seconds per side to fuse evenly. Depending on the size of the project, additional heating time may be required. Since you are working on a 3-D project, DO NOT OVER-IRON the beads as it will make the centers of the beads close and can make assembly more challenging.





