

YOU WILL NEED:

Bead Colors:

- Light Pink - 54
- Pink - 54
- Hot Coral - 18
- Red - 88
- Orange - 64
- Cheddar - 23
- Yellow - 188
- Pastel Yellow - 62
- Crème - 4

- Kiwi Lime - 568
- Green - 48
- Dark Green - 24
- Toothpaste - 249
- Light Blue - 130
- Dark Blue - 592
- Purple - 16
- White - 184

Pegboard:

Large square

Other:

- Iron and ironing paper
- Tweezers
- Sturdy rubber bands
- Small soup can
- Glue gun (optional)

Instructions

1. Measure the width of your cell phone to make sure it will fit into the slot of the design piece. You might need to widen the opening. Add rows to the width of the design, using as many of the grey circles as needed to add to the width and extend the opening.


If you are using a clear pegboard, slide the actual-size pattern underneath it. Place your beads on the pegboard as shown.

2. Ask an adult to fuse your designs—see page 4 for further instructions. **NOTE:** There are separate fusing instructions for the bases and the design pieces that will be curved.


3. Assembly: After the curved pieces are cool, carefully remove the rubber bands.

Insert the bottom row at each end of the curved piece into the slots in the matching base.

Garden design

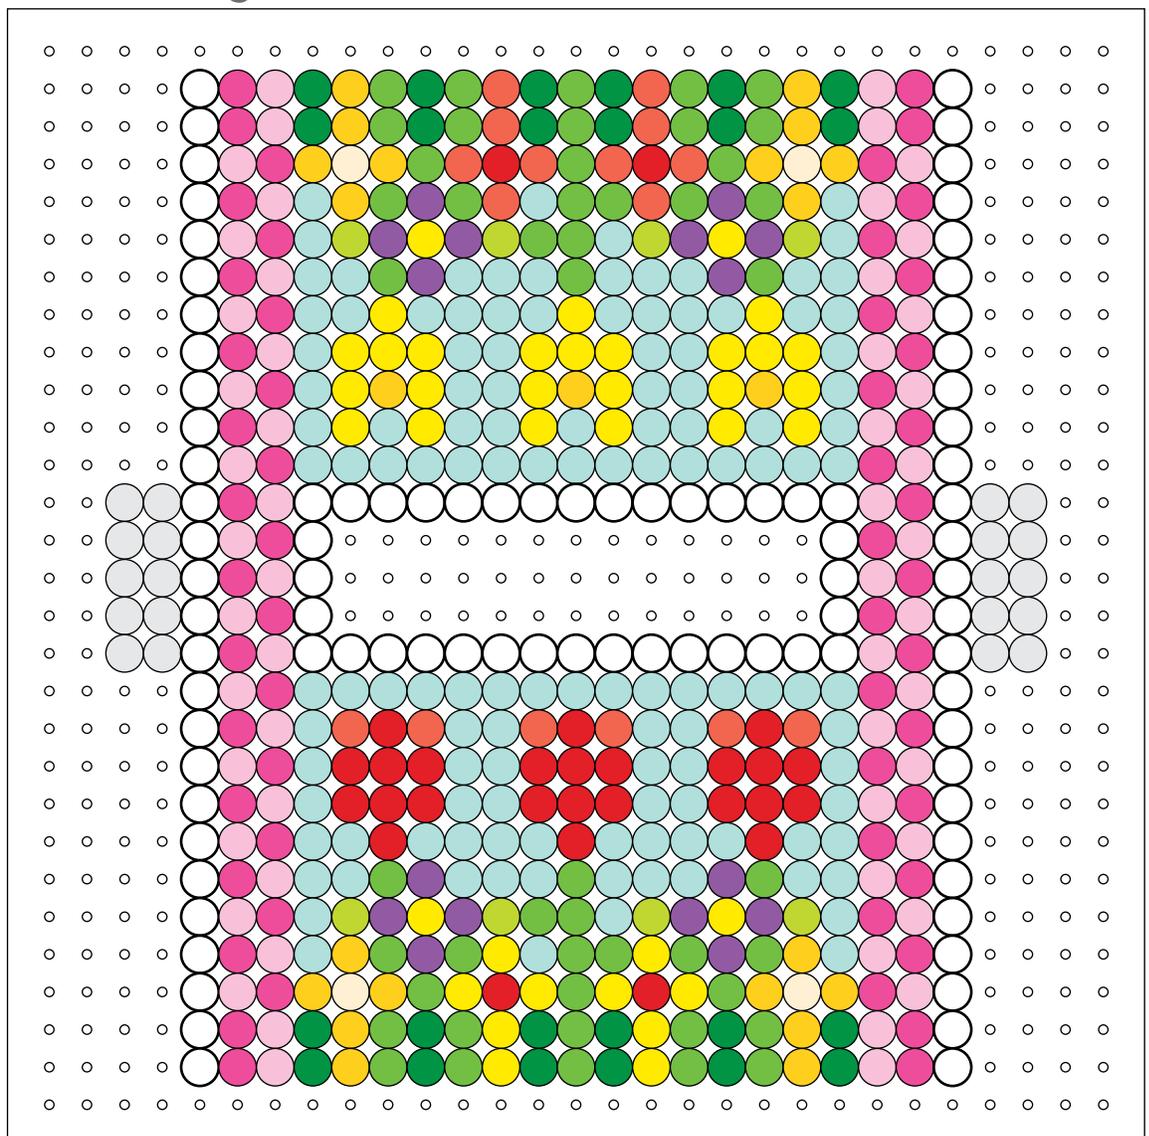


Garden Base

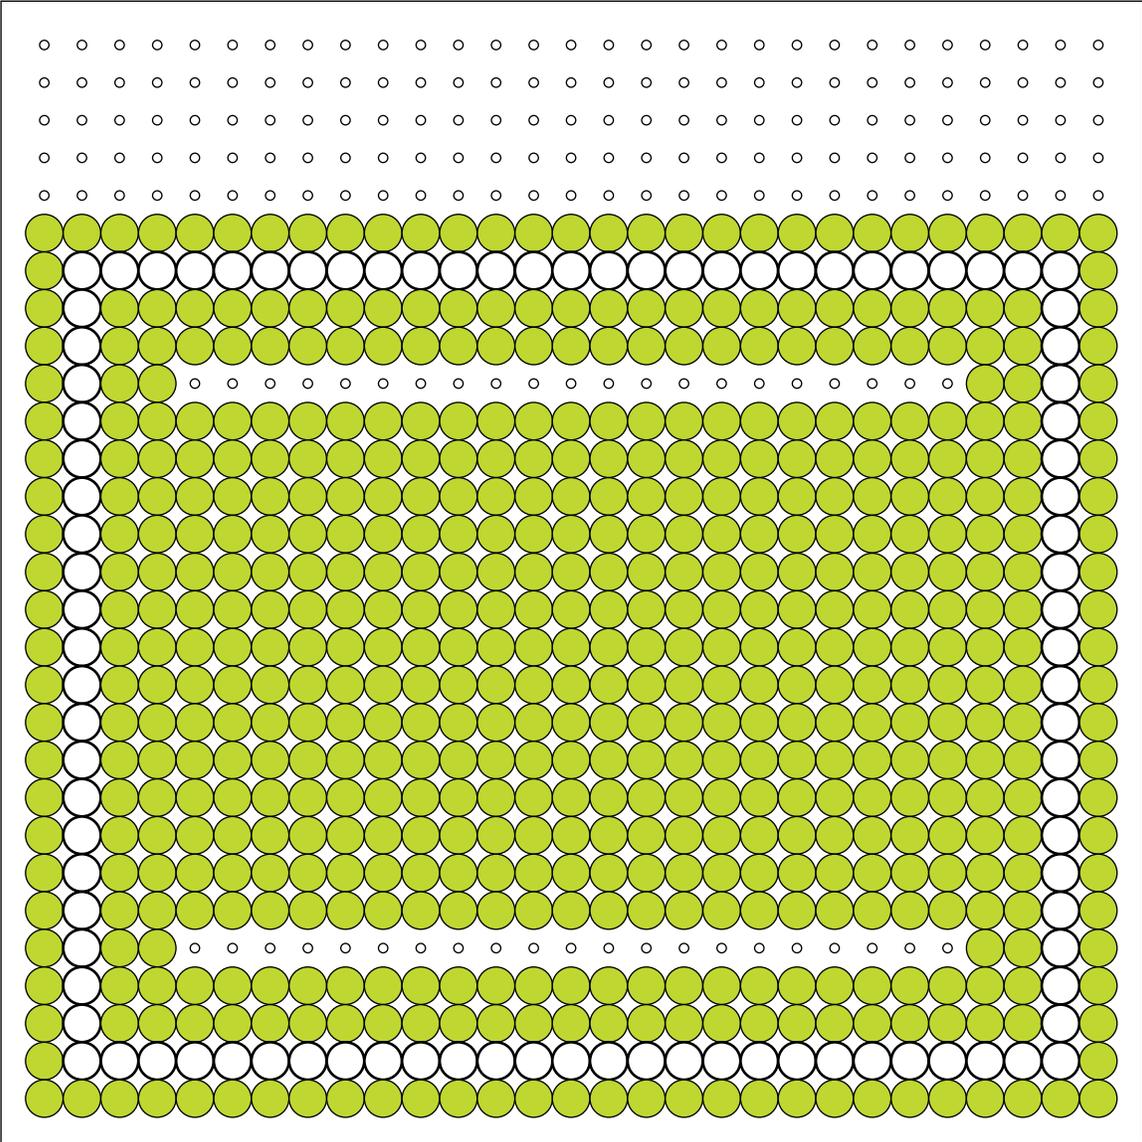

Bead Colors:
● Kiwi Lime
○ White

Super Hero design

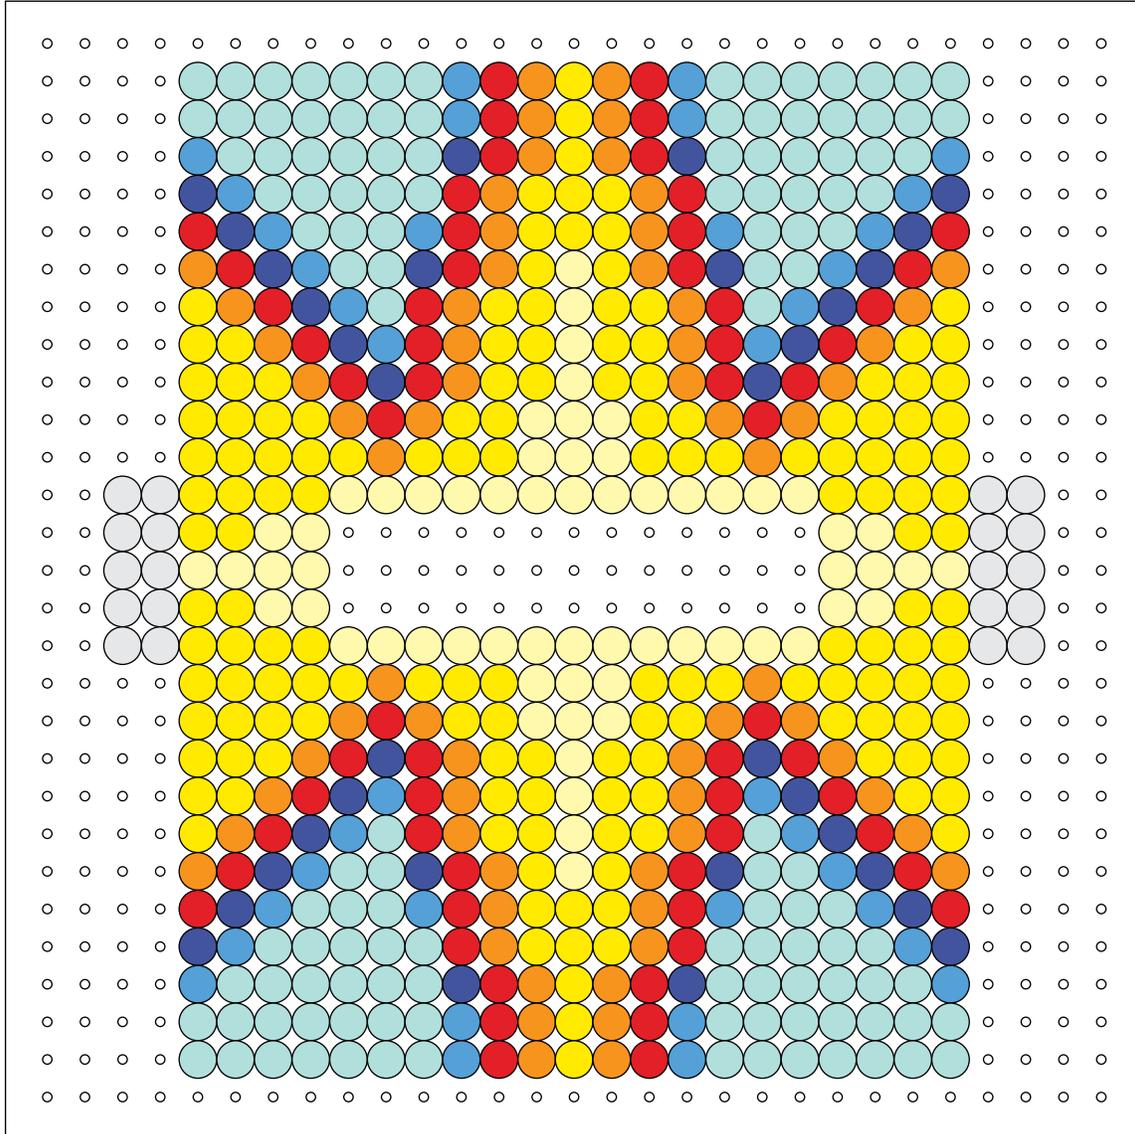


Bead Colors:

-  Red
-  Orange
-  Yellow
-  Pastel Yellow
-  Toothpaste
-  Light Blue
-  Dark Blue

Super Hero Base

Bead Colors:

-  Light Blue
-  Dark Blue

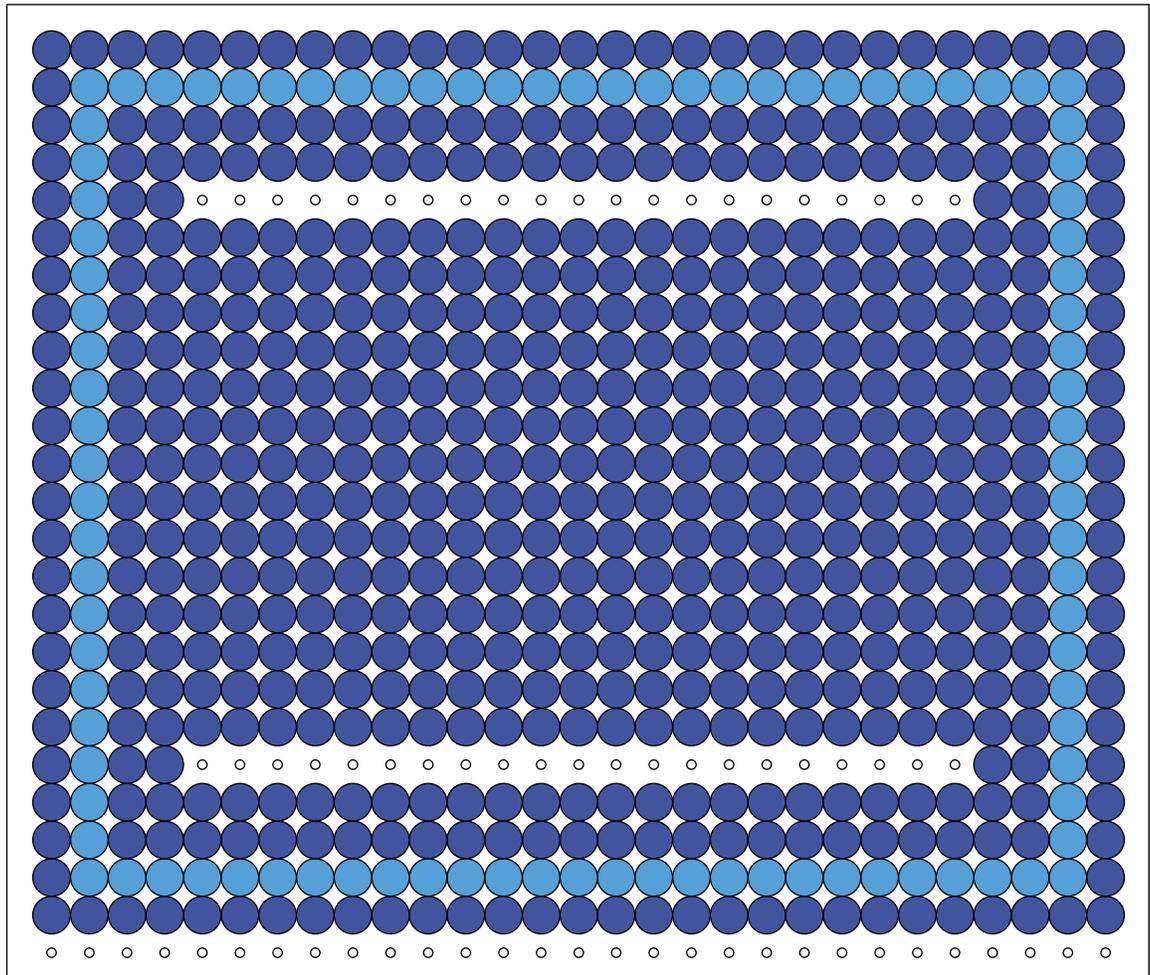

Fusing Instructions—Only Adults Iron

FUSING THE BASES



1. Place your pegboard on a flat, heat-safe surface.
2. Set a household iron to the medium setting. Place ironing paper over the pegboard. In a circular motion, begin to iron the project. Do not press down with the iron. As the beads begin to fuse, you will see circles of the beads start to show through the paper. When ironed properly, the beads will still have an open center. Let the design cool.
3. Remove the paper and bead design from the pegboard. Flip the design over to expose the non-fused side. Repeat step two. Let cool completely. Your pegboard and ironing paper are reusable.

NOTE: Beads need heat for about 10-20 seconds per side to fuse evenly. Lift the paper occasionally to see how the beads are fusing. Depending on the size of the project, additional heating time may be required. **DO NOT OVER-IRON** the beads as it will flatten them and can make the assembly you do with your project more challenging.

FUSING THE CURVED PIECES

Follow the same basic procedure as above with the following exceptions:

- Fuse on **ONE SIDE ONLY**, and fuse this side well. It's ok if the holes get very small or close up.
- **DO NOT** let the piece cool. Immediately remove the paper and carefully (it will be hot!) remove the design from the pegboard and wrap it around the soup can with the unfused side facing out. Hold in place with rubber bands until cool.