Chinese Dragon



YOU WILL NEED:

Pegboard:

Large heart

Other:

• Quick-drying adhesive

Bead Colors:

White - 84

Black - 10

Yellow - 43

Red - 47

Orange - 14 Green - 88


Dark Green - 42

Fire Stripe - 60

Cucumber Stripe - 218

Instructions

- 1. Place your beads on the pegboard as
- page 2 for further instructions.

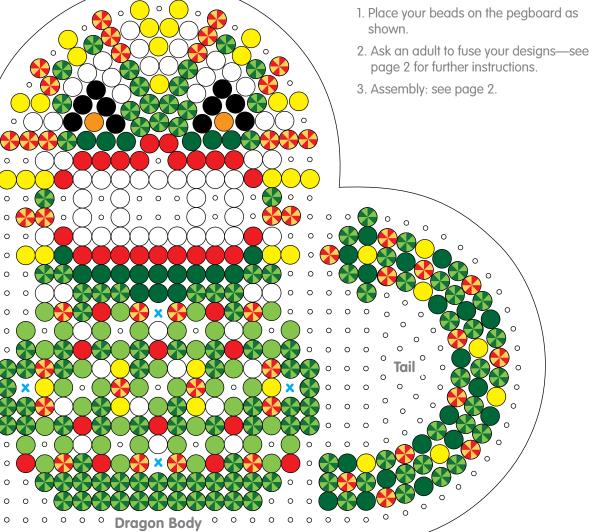

Chinese Dragon




Bead Colors:

- White
- Yellow
- Red
- Orange
- Green
- Dark Green
- Fire Stripe
- Cucumber Stripe

ASSEMBLY

- 1. Connect the dragon's body and backside together using the spacers—insert them between the front and back pieces at the positions marked by the Xs.
- 2. Glue the tail to the dragon's backside.
- 3. Place the tongue into mouth as follows. Work from the front of the head fitting the plus shape end through to the back. To wiggle the tongue, simply press the tongue on the back of the head.

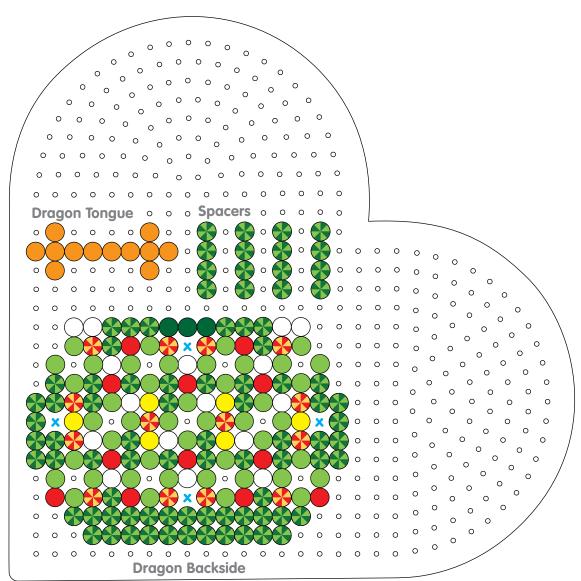

Fusing Instructions—Only Adults Iron



- 1. Place your pegboard on a flat, heat-safe surface.
- 2. Set a household iron to the medium setting. Place ironing paper over the pegboard. In a circular motion, begin to iron the project. Do not press down with the iron. As the beads begin to fuse, you will see circles of the beads start to show through the paper. When ironed properly, the beads will still have an open center. Let the design cool.
- 3. Remove the paper and bead design from the peg board. Flip the design over to expose the non-fused side. Repeat step two. Let cool completely.

NOTE: Beads need heat for about 10-20 seconds per side to fuse evenly. Lift the paper occasionally to see how the beads are fusing. Depending on the size of the project, additional heating time may be required. DO NOT OVER-IRON the beads as it will make the centers of the beads close and can make any assembly you do with your project more challenging.