

page 1

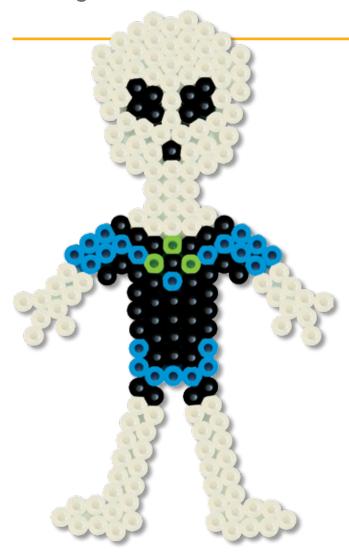

Instructions

- Use the large boy and small circle pegboards for your projects.
 If you're using a clear pegboard, slide the actual-size pattern underneath it. Place all the beads for the design.
- 2. Cover the completed design with the ironing paper. Keeping the iron level, gently iron the beads in a circular motion for about 10 seconds to fuse the beads evenly. Ironed properly, the beads will still have an open center.
- 3. Once the design is cool, peel off the ironing paper. Lift your design from the pegboard; flip the design over and repeat step #2. Your pegboard and ironing paper are reusable.

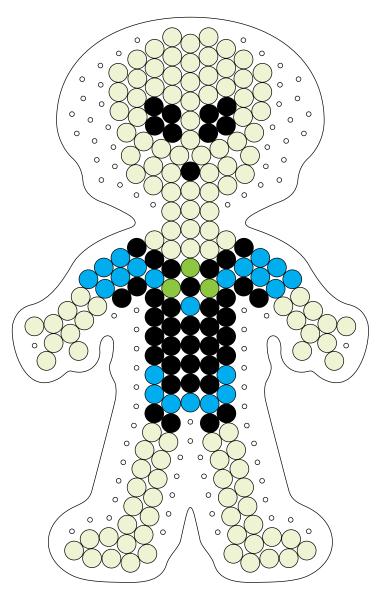

Bead Color/# Needed:

- Kiwi Lime 3
- GITD* Green 126
- Light Blue 9
- Black 78
- * Glow-in-the-Dark

