

Jack-in-the-Box



YOU WILL NEED:

Pegboards:

- Large Square
- Large Hexagon

Other:

- Quick-drying adhesive

Bead Colors / Quantity Needed:

- | | |
|---------------------|----------------------|
| Peach - 39 | Kiwi Lime - 148 |
| Bubblegum - 11 | Parrot Green - 39 |
| Hot Coral - 42 | Toothpaste - 55 |
| Red - 82 | Turquoise - 283 |
| Orange - 203 | Blueberry Cream - 48 |
| Pastel Yellow - 111 | Plum - 15 |
| Yellow - 92 | Purple - 558 |
| Gold Metallic - 6 | White - 95 |


Instructions

1. Place your beads on the pegboards as shown. If you are using a clear pegboard, slide the actual-size pattern underneath it.
2. Ask an adult to fuse your designs—see Fusing Instructions on page 4.
3. **Assembly:** see pages 5-7.


Jack

Bead Colors:

- Peach
- Bubblegum
- Hot Coral
- Red
- Yellow
- Gold Metallic
- Kiwi Lime
- Toothpaste
- Turquoise
- Blueberry Cream
- Purple
- White

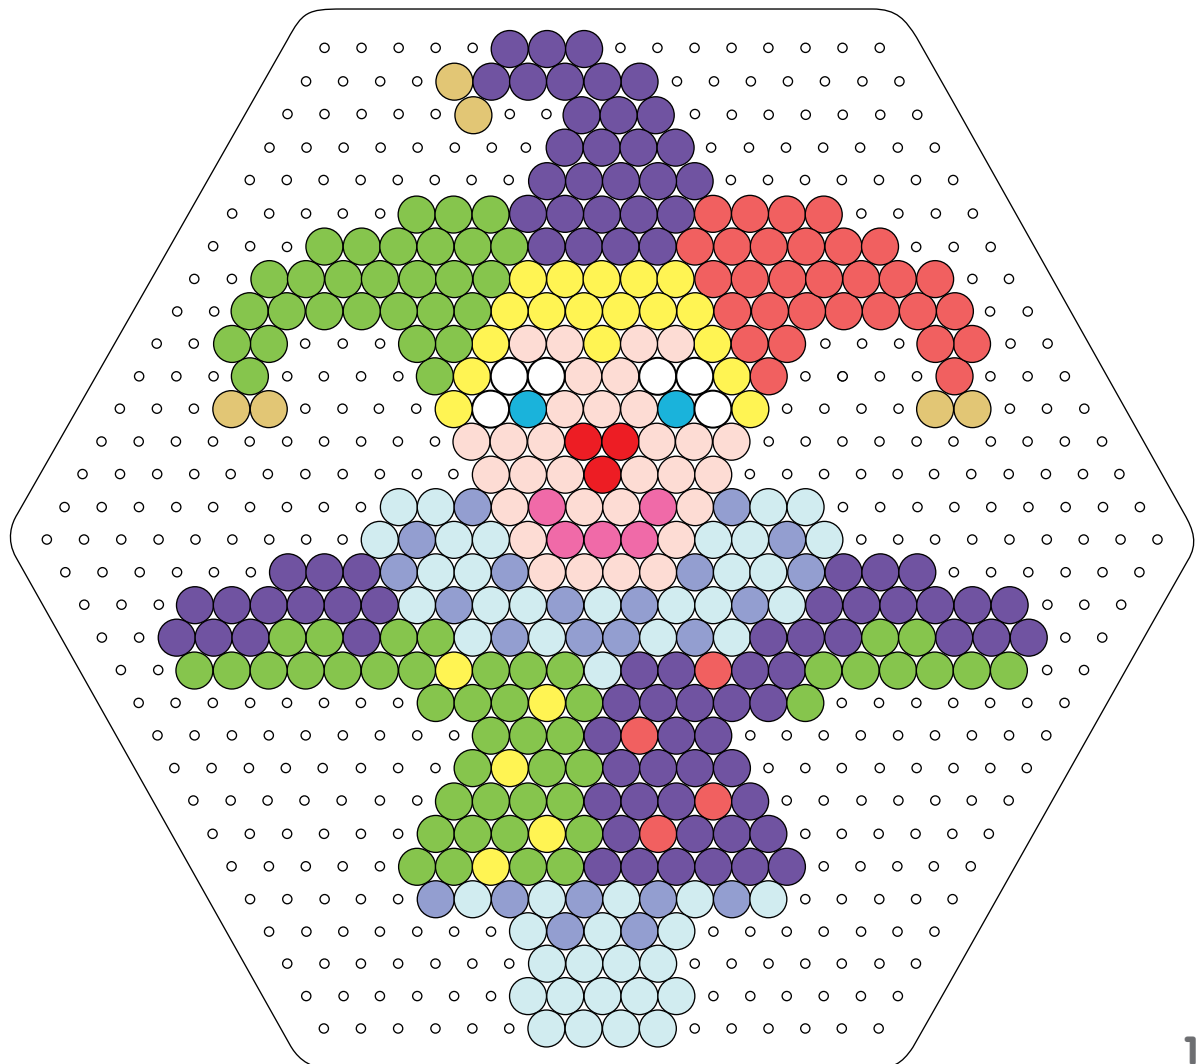


Box Front

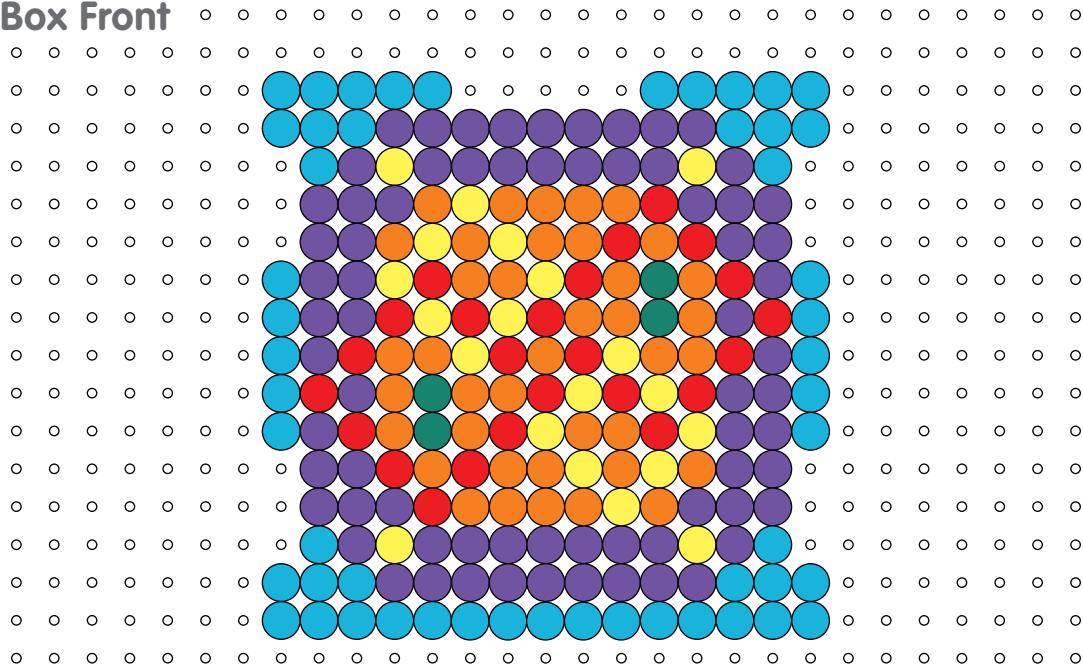


Bead Colors:


-  Red
-  Orange
-  Yellow
-  Parrot Green
-  Turquoise
-  Plum
-  Purple

Box Back

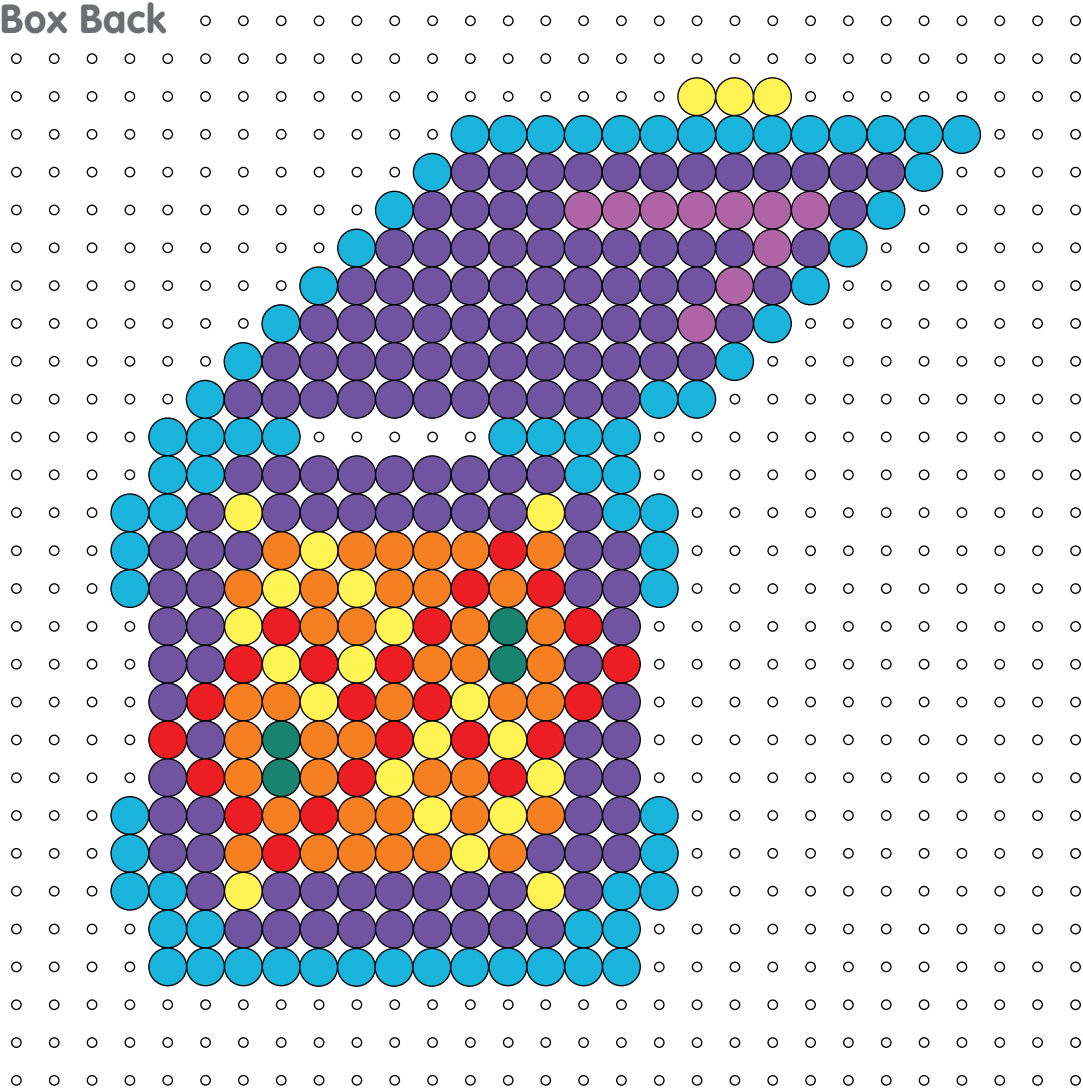

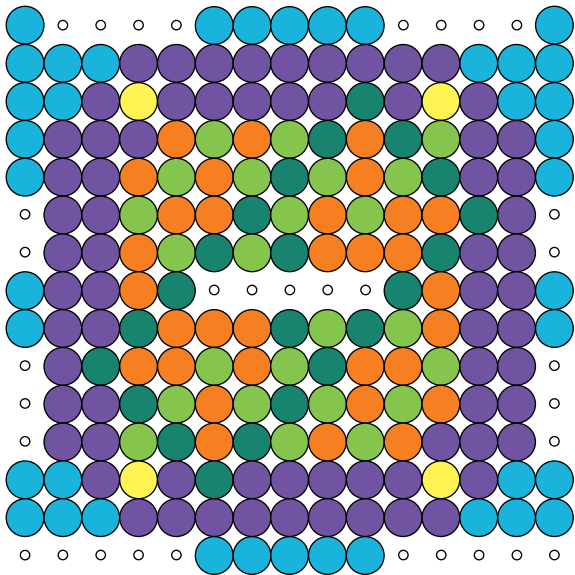


Box Top

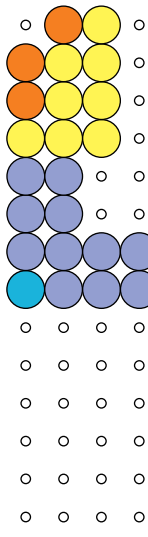


Box Handle

Bead Colors:


-  Peach
-  Red
-  Orange
-  Yellow
-  Kiwi Lime
-  Parrot Green
-  Toothpaste
-  Blueberry Cream
-  Turquoise
-  Purple

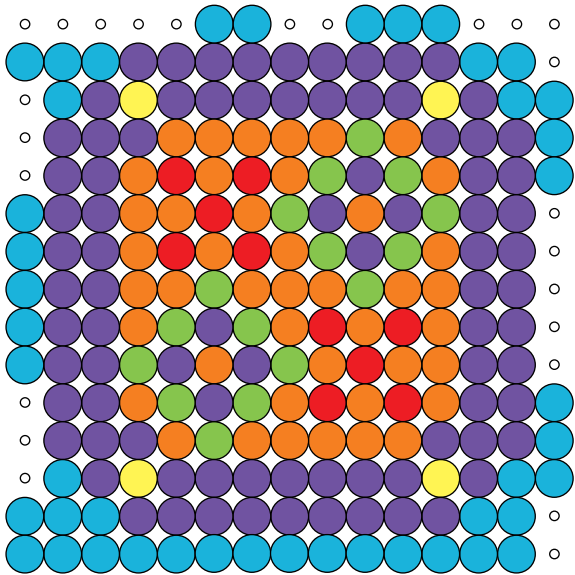

Left Side

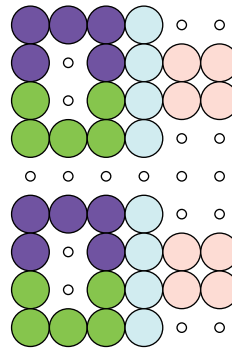

Jack's Hands

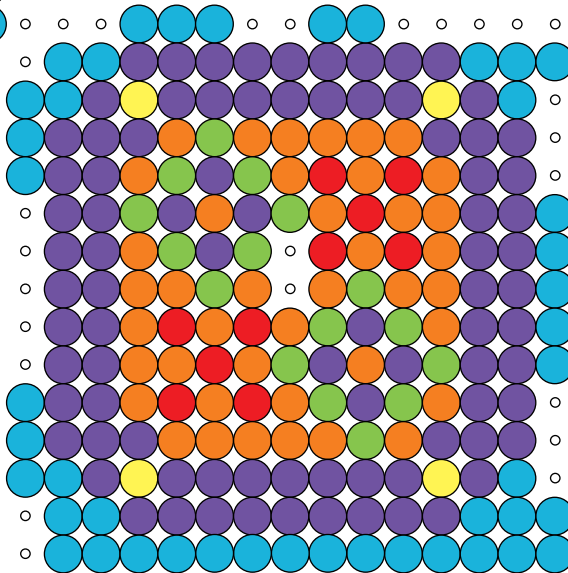


Right Side

Sign

Bead Color:

-  Bubblegum
-  Hot Coral
-  Red
-  Orange
-  Pastel Yellow
-  Yellow
-  Kiwi Lime
-  Parrot Green
-  Turquoise
-  Plum
-  Purple
-  White

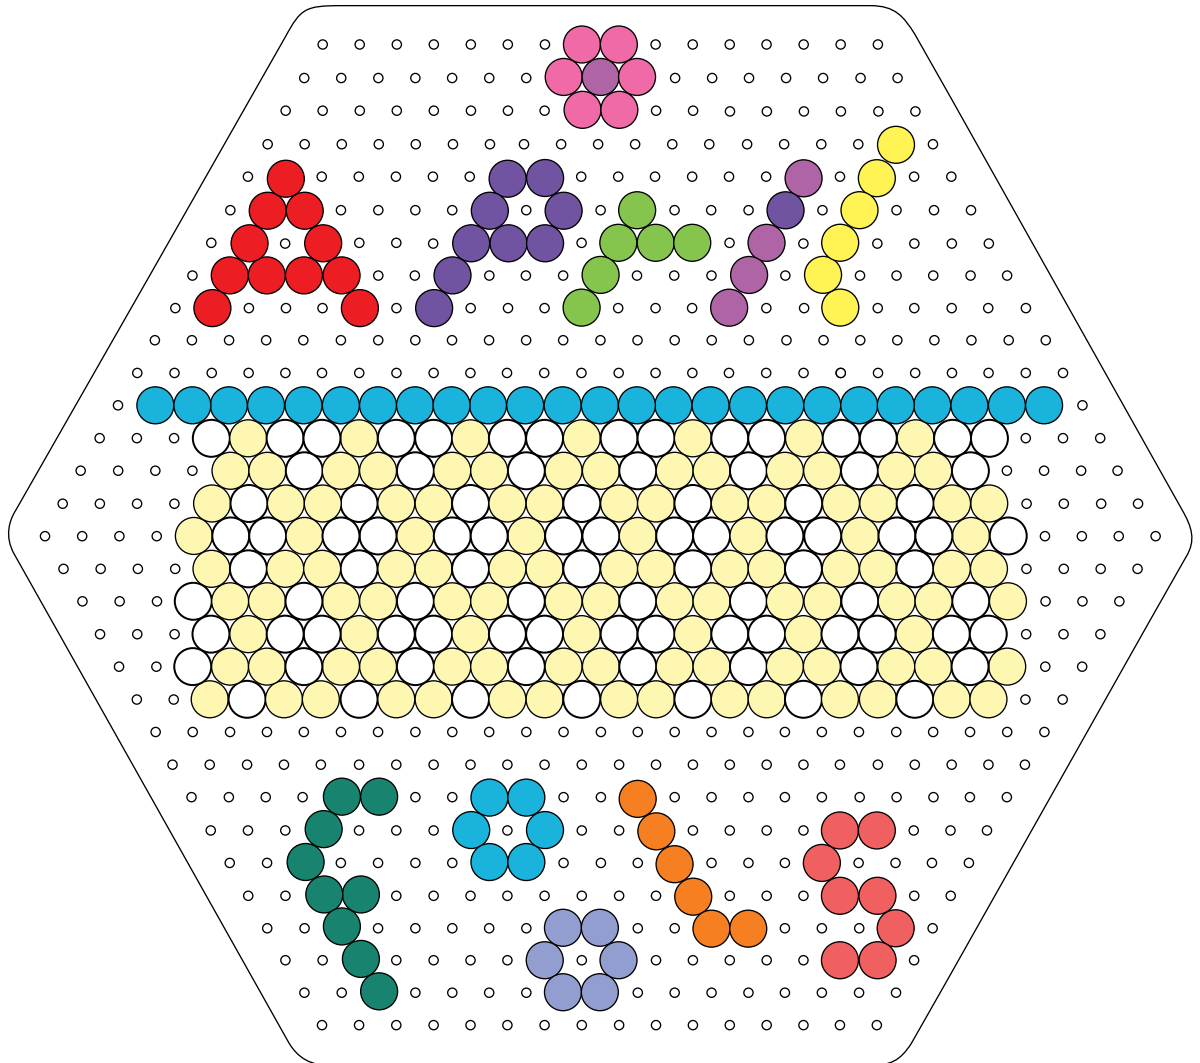


Fusing Instructions—Only Adults Iron




1. Place your pegboard on a flat, heat-safe surface.
2. Set a household iron to the medium setting. Place ironing paper over the pegboard. In a circular motion, begin to iron the project. Do not press down with the iron. As the beads begin to fuse, you will see circles of the beads start to show through the paper. When ironed properly, the beads will still have an open center. Let the design cool.
3. Remove the paper and bead design from the peg board. Flip the design over to expose the non-fused side. Repeat step two. Let cool completely.

NOTE: Beads need heat for about 10-20 seconds per side to fuse evenly. Lift the paper occasionally to see how the beads are fusing. Depending on the size of the project, additional heating time may be required. **DO NOT OVER-IRON** the beads as it will make the centers of the beads close and can make the assembly you do with your project more challenging.

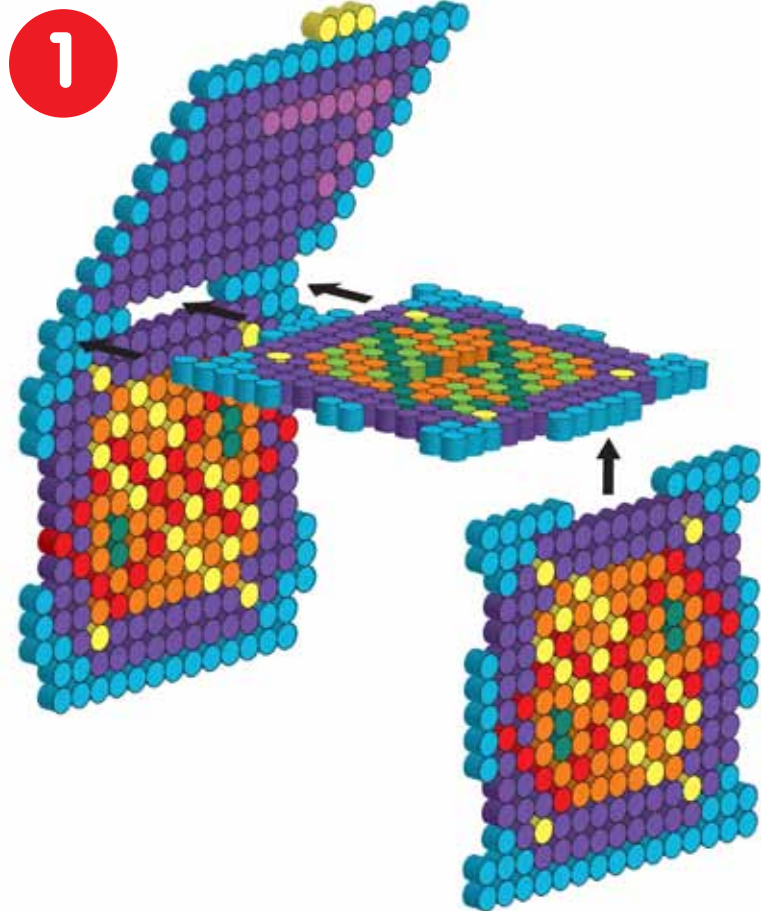

ASSEMBLY

1. Insert the box top into the back piece. Connect the box front to the top.
2. Add the left and right sides to complete the box.

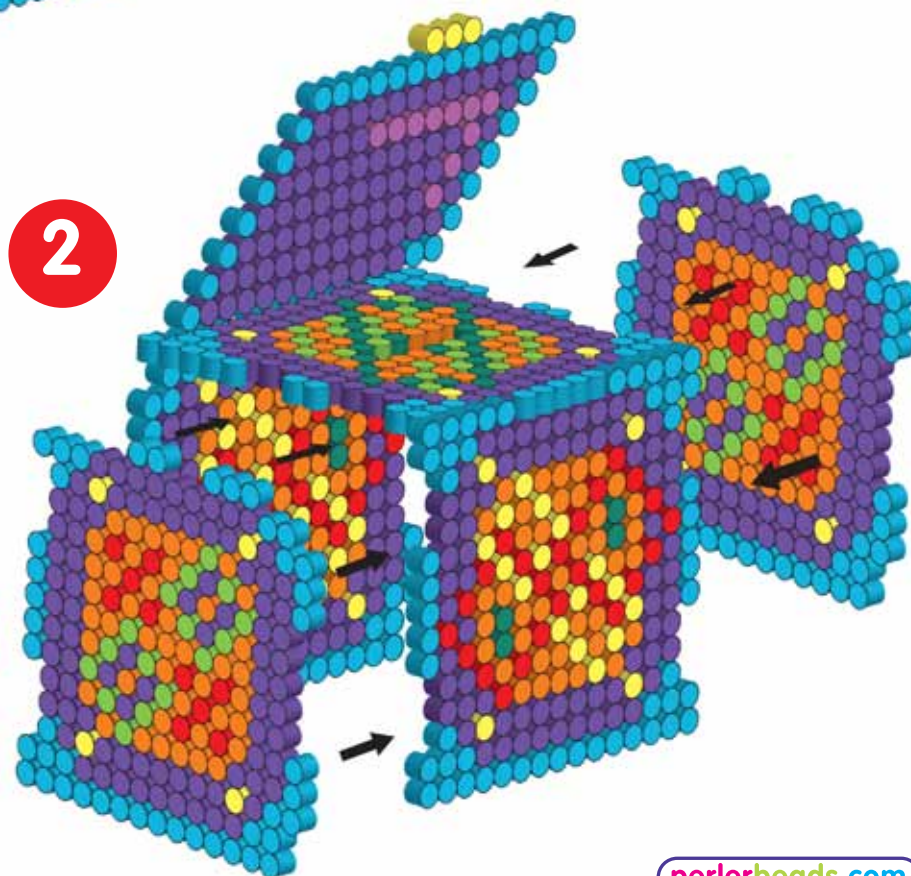




ASSEMBLY (cont.)

3. Insert the handle in the opening on the right side. Press the hands onto the arms, and then insert Jack in the slot of the box top.

4. Glue the letters to the sign and allow to dry.

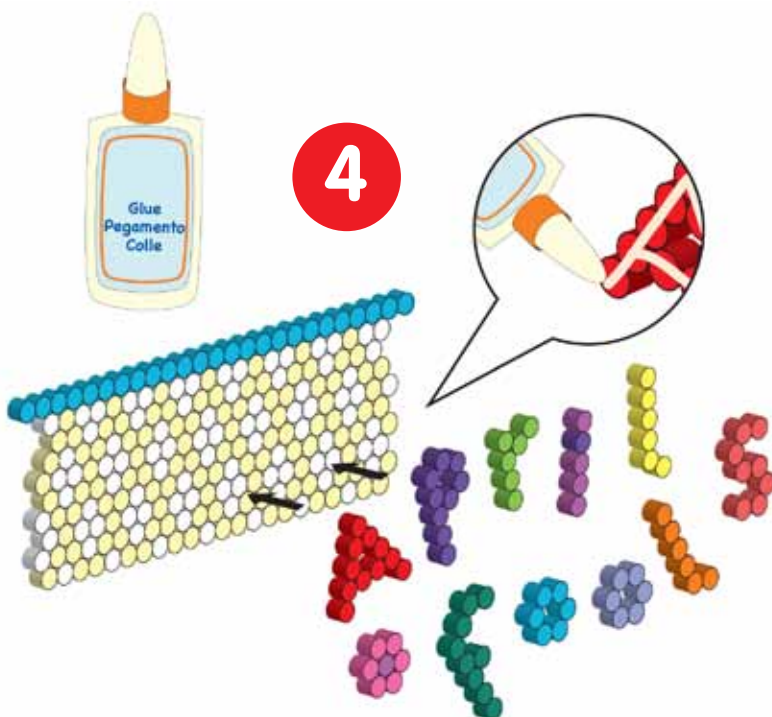

6

Place the sign within Jack's hands.

