


Keepsake Box

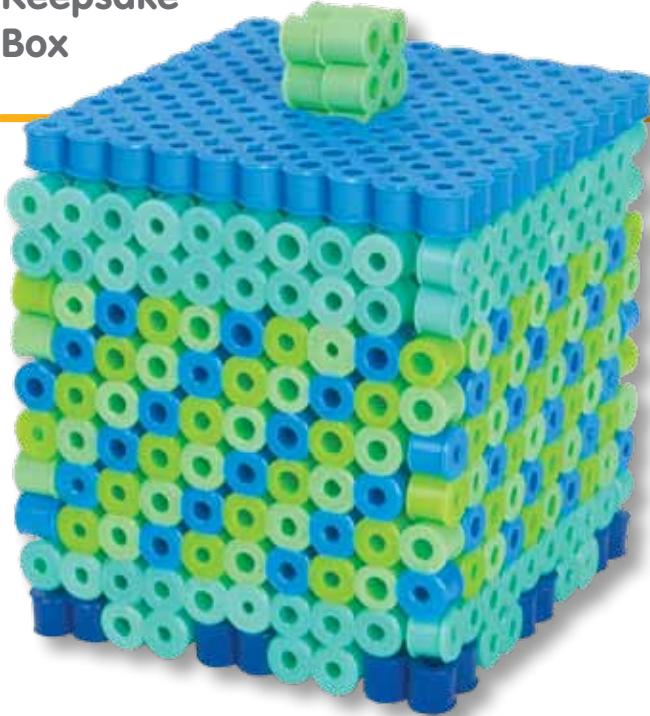

perler
beads™/mc

YOU WILL NEED:

Pegboard:

Large Square

Bead Colors:

- Pastel Green 15053
- Kiwi Lime 15061
- Light Green 15011
- Light Blue 15009
- Dark Blue 15008

You will need quick-drying adhesive to complete your project.

Instructions

1. Place your beads on the pegboards as shown. If you are using a clear pegboard, slide the actual-size pattern underneath it.
2. Ask an adult to fuse your designs—see Fusing Instructions on page 2.

Box Sides

Bead Color/# Needed:


- Pastel Green - 72
- Kiwi Lime - 72
- Light Green - 124
- Light Blue - 72


Assembly

Join the side pieces to form the box by aligning the tabs and slots.

Again aligning the tabs and slots, press the bottom piece onto the box.

Glue the two layers of the knob together, then insert one row into the opening in the lid as shown.

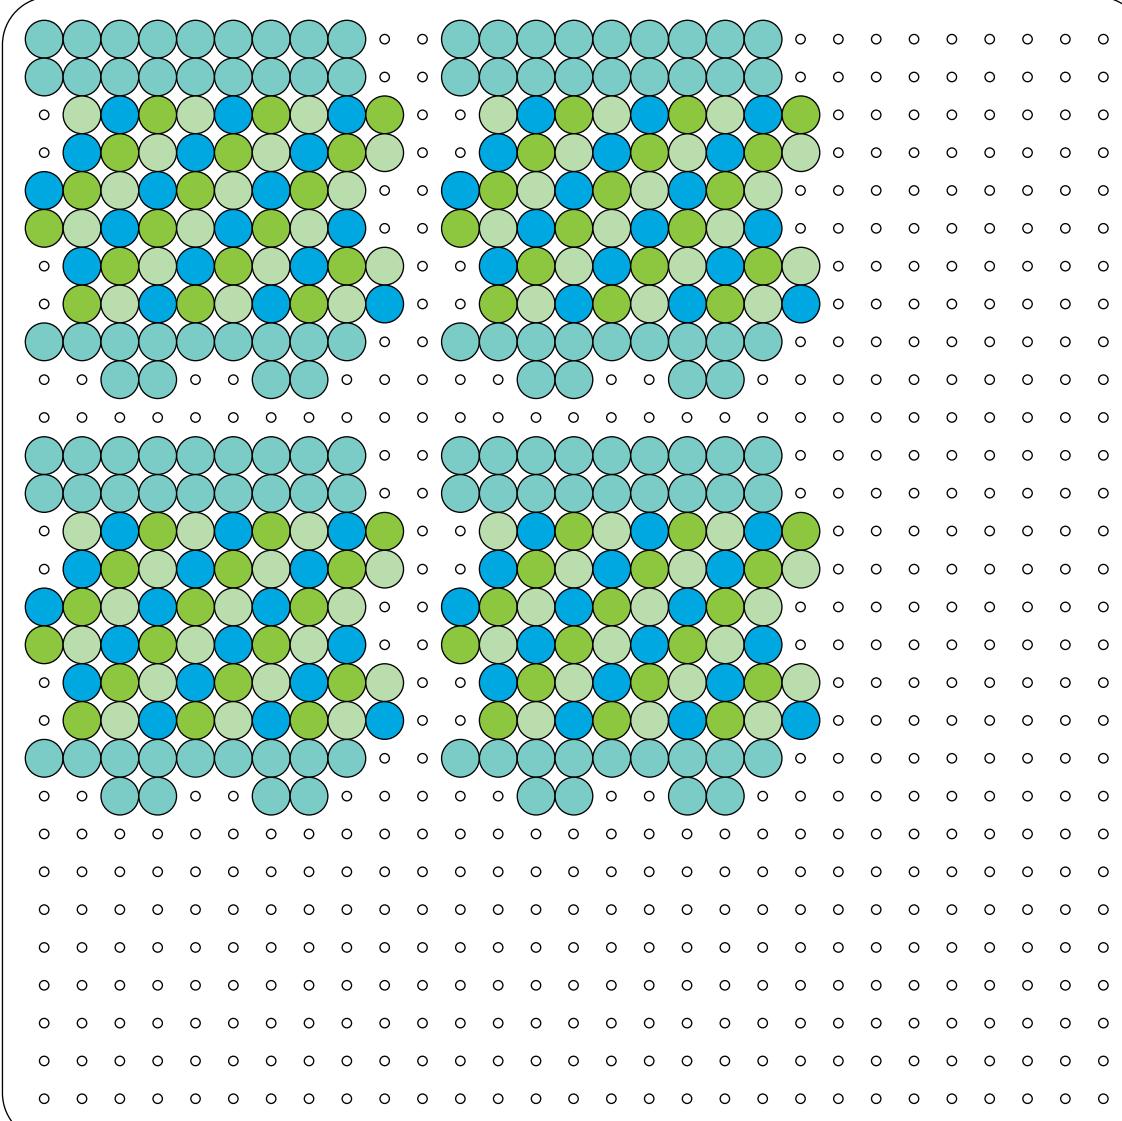

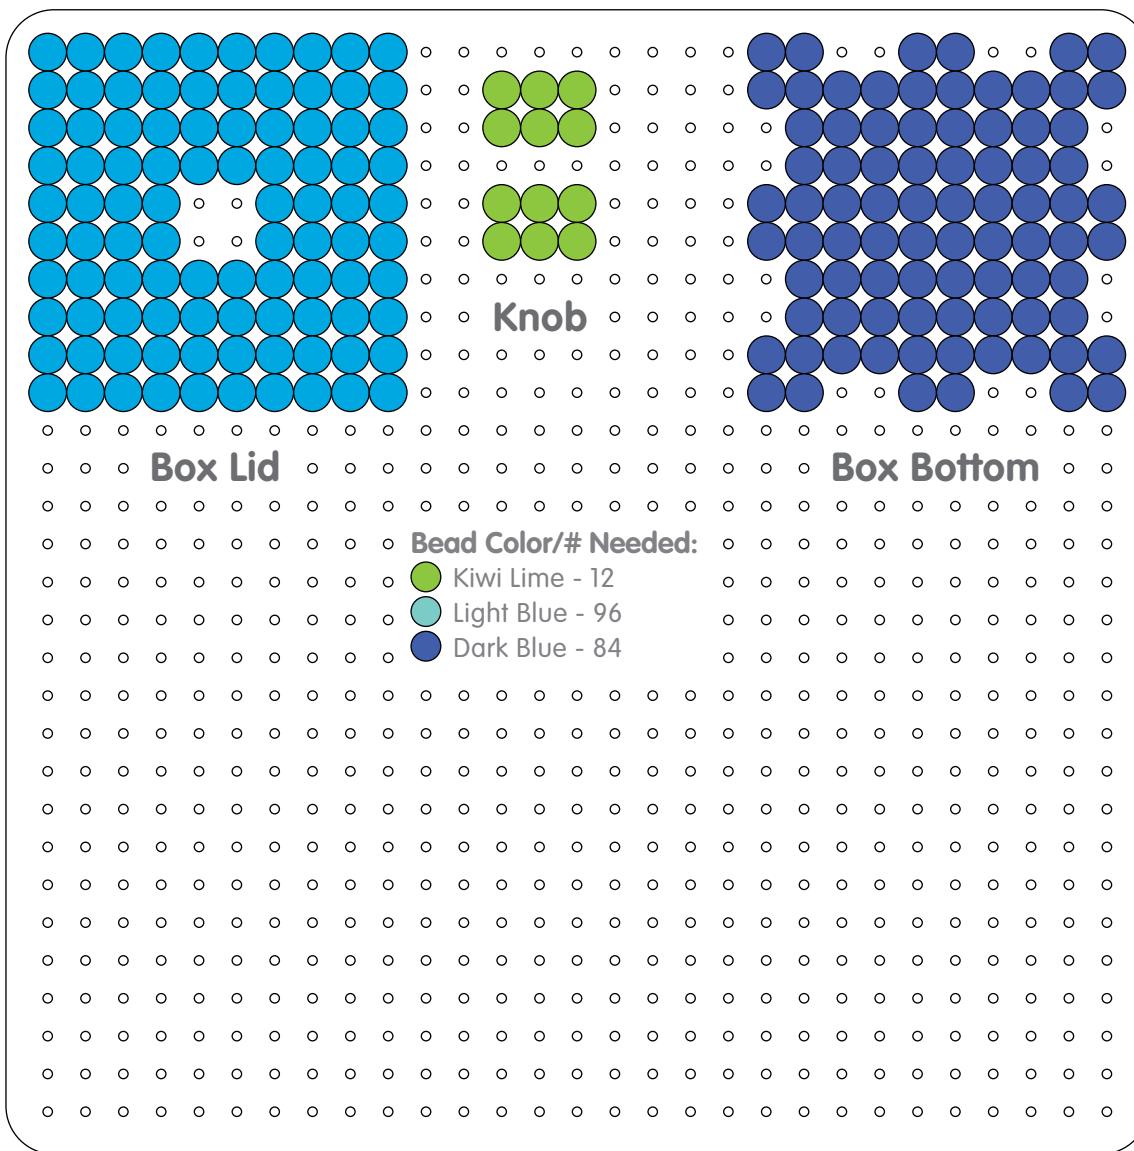

Fusing Instructions—Only Adults Iron



1. Place your pegboard on a flat, heat-safe surface.
2. Set a household iron to the medium setting. Place ironing paper over the pegboard. In a circular motion, begin to iron the project. Do not press down with the iron. As the beads begin to fuse, you will see circles of the beads start to show through the paper. When ironed properly, the beads will still have an open center. Let the design cool.
3. Remove the paper and bead design from the peg board. Flip the design over to expose the non-fused side. Repeat step two. Let cool completely.

NOTE: Beads need heat for about 10-20 seconds per side to fuse evenly. Lift the paper occasionally to see how the beads are fusing. Depending on the size of the project, additional heating time may be required. DO NOT OVER-IRON the beads as it will make the centers of the beads close and can make any assembly you do with your project more challenging.