



YOU WILL NEED:

Pegboard:

Large hexagon

Other:

- Felt
- Craft glue


Bead Colors:


Pink - 65	Pastel Green - 188
Raspberry - 173	Kiwi Lime - 40
Plum - 52	Green - 31
Red - 119	Parrot Green - 17
Butterscotch - 4	Dark Green - 120
Cheddar - 54	Toothpaste - 166
Yellow - 68	Blueberry Cream - 46
	Light Blue - 34

Instructions

1. Place your beads on the pegboard as shown. If you are using a clear pegboard, position the actual size pattern underneath the board, then place the beads following the pattern.
2. Ask an adult to fuse your designs—see Fusing Instructions on page 3.
3. **Assembly:** See page 4.

Butterfly & Basket Base

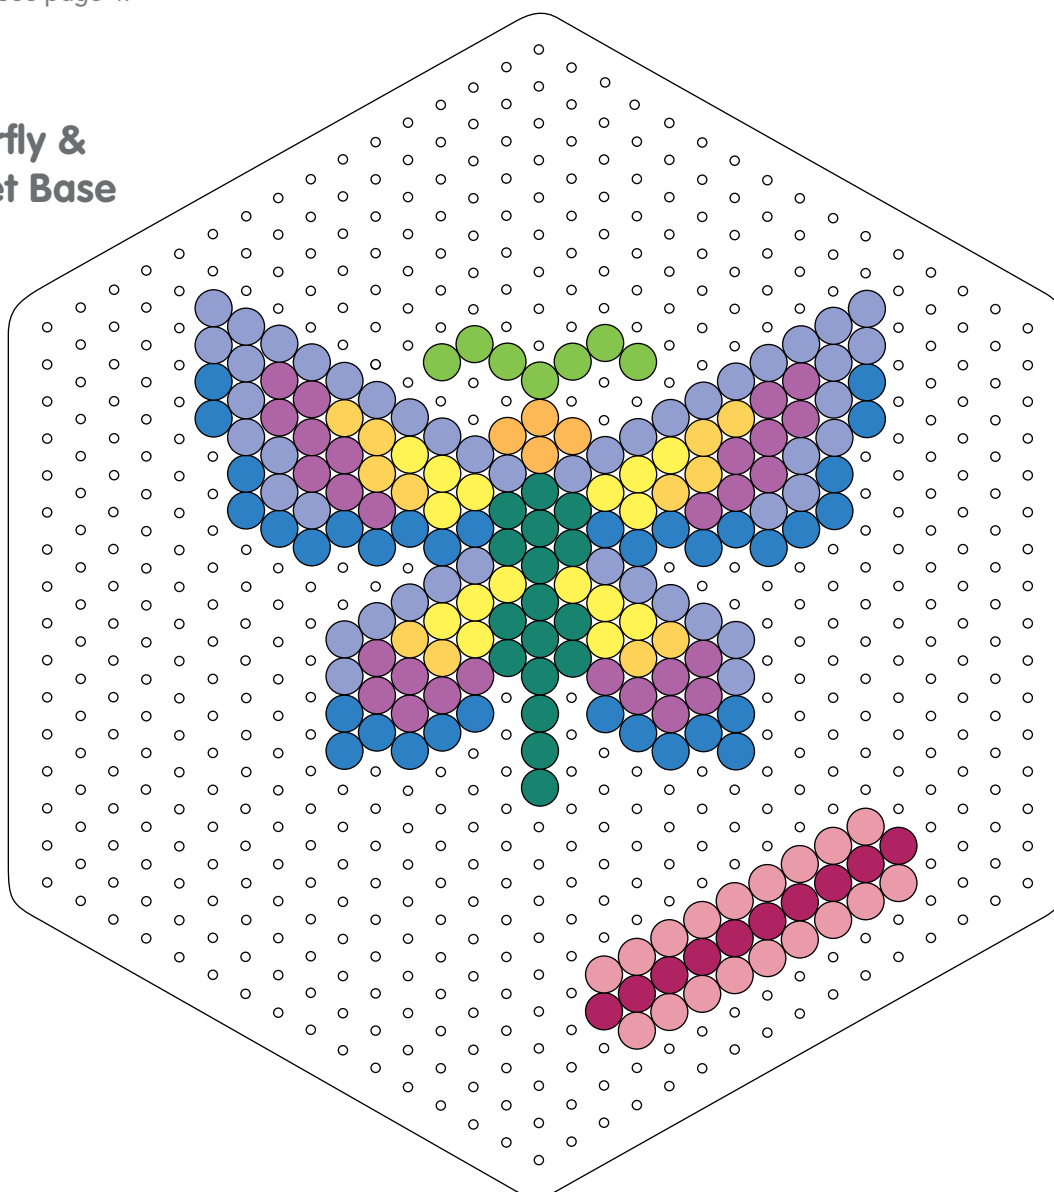


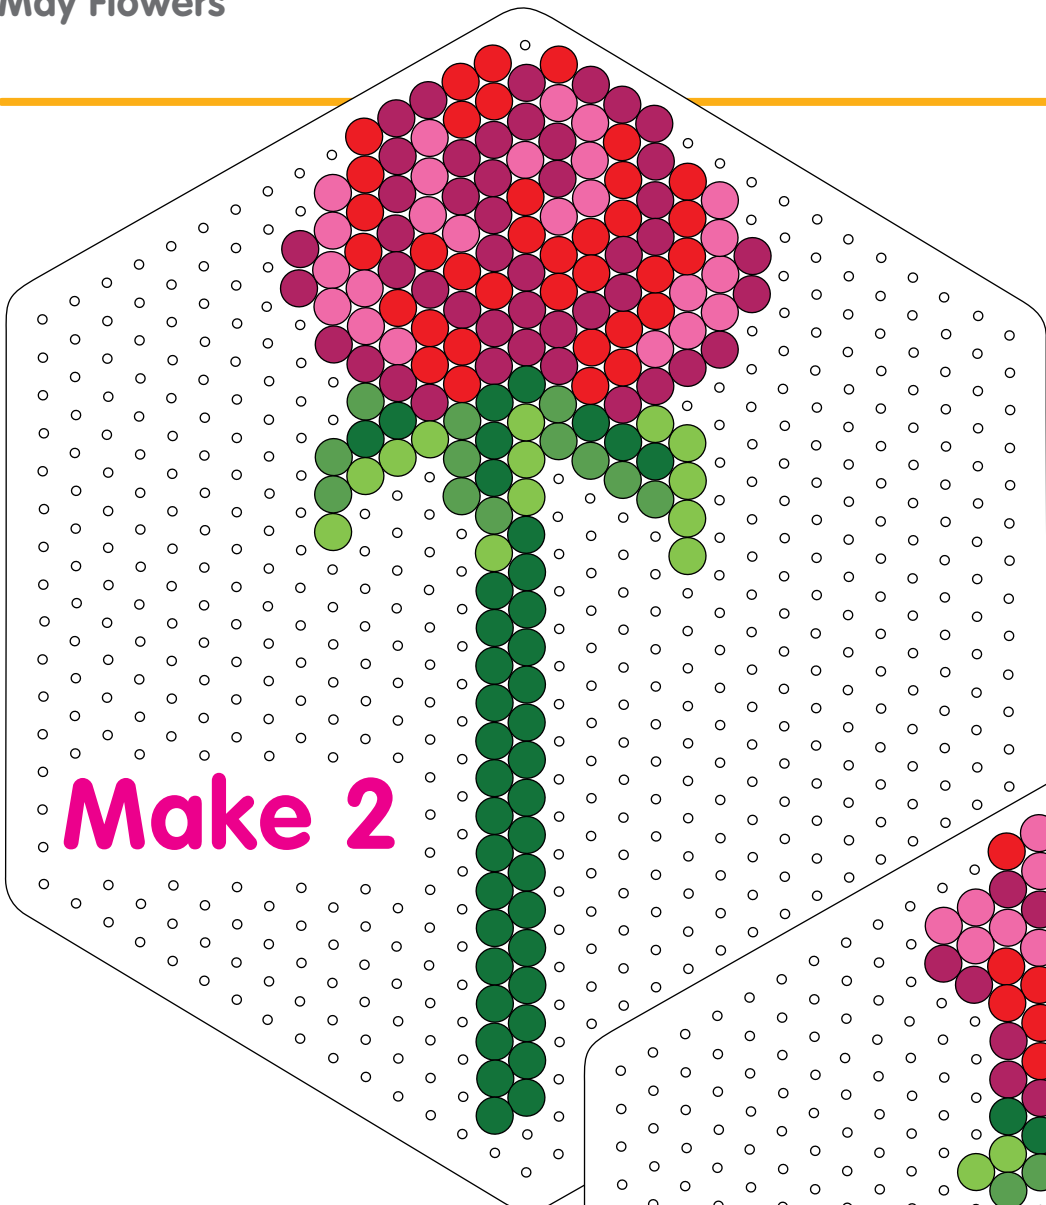

Roses

Bead Colors:

-  Pink
-  Raspberry
-  Red
-  Kiwi Lime
-  Green
-  Dark Green

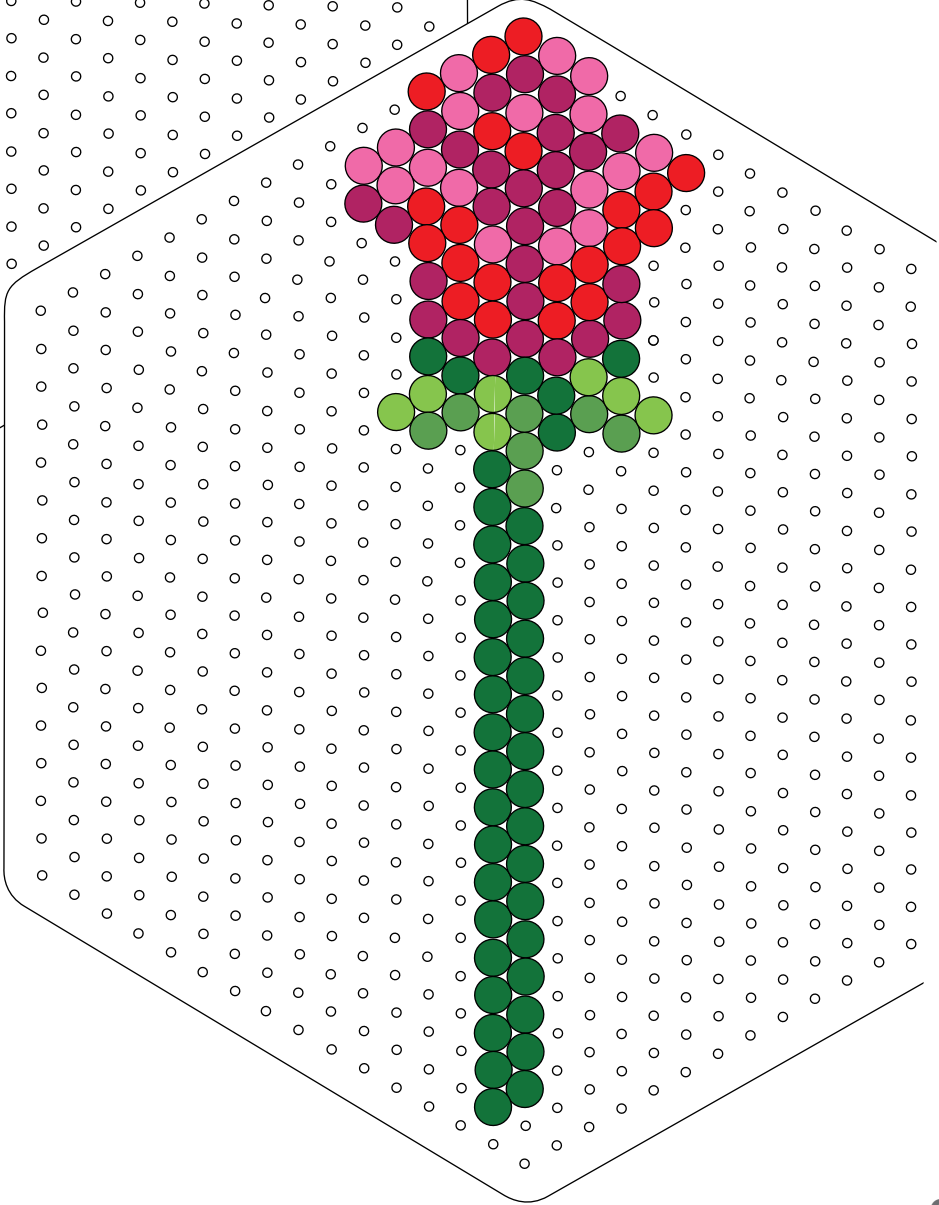


Basket

Bead Color/# Needed:

-  Bubblegum
-  Raspberry
-  Plum
-  Red
-  Cheddar
-  Yellow
-  Pastel Green
-  Toothpaste

Make 2

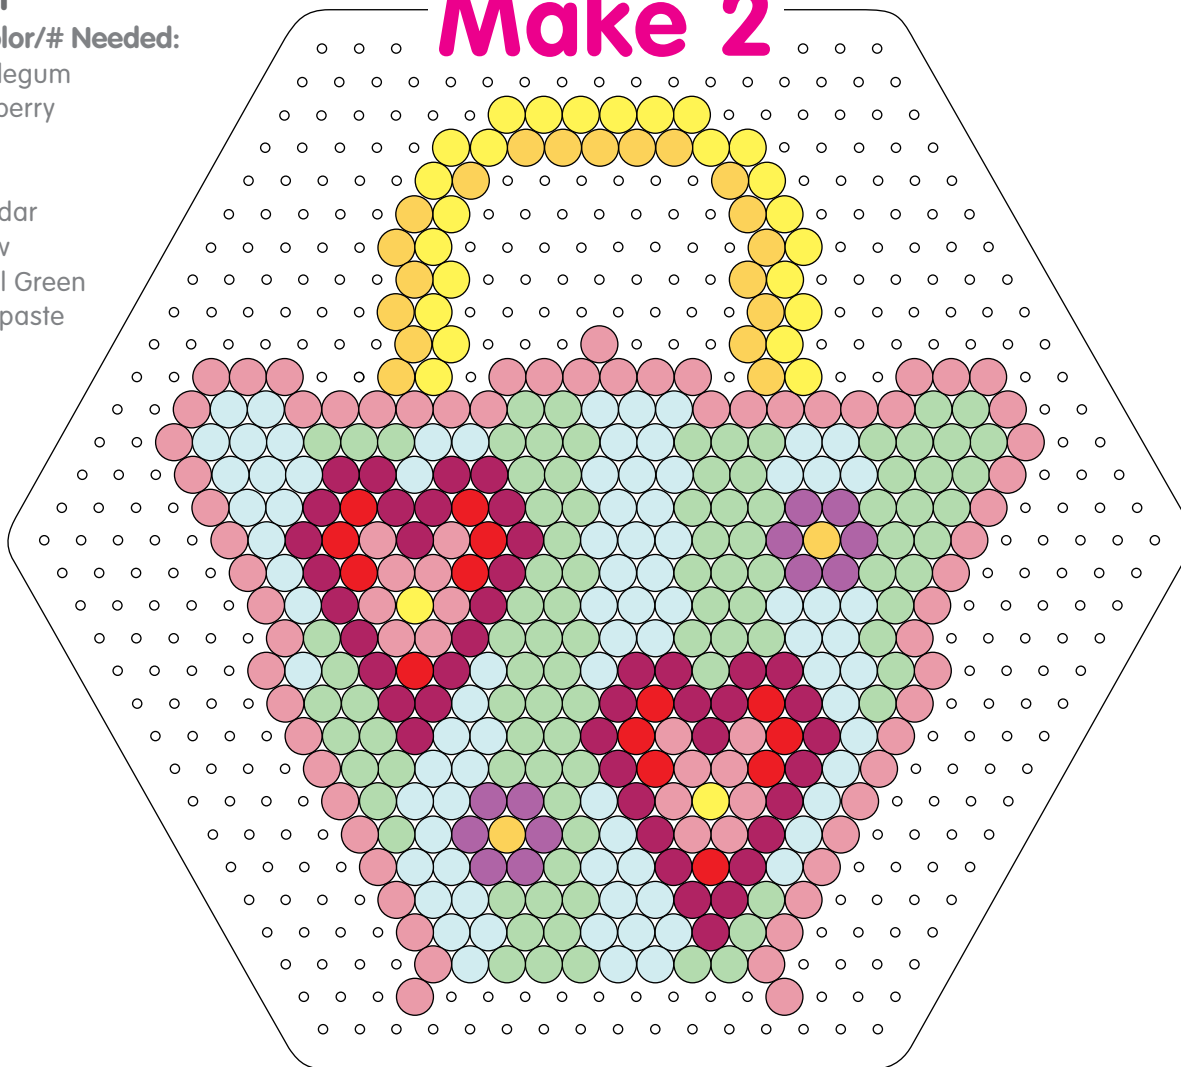

Fusing Instructions—Only Adults Iron



1. Place your pegboard on a flat, heat-safe surface.
2. Set a household iron to the medium setting. Place ironing paper over the pegboard. In a circular motion, begin to iron the project. Do not press down with the iron. As the beads begin to fuse, you will see circles of the beads start to show through the paper. When ironed properly, the beads will still have an open center. Let the design cool.
3. Remove the paper and bead design from the peg board. Flip the design over to expose the non-fused side. Repeat step two. Let cool completely.

NOTE: Beads need heat for about 10-20 seconds per side to fuse evenly. Lift the paper occasionally to see how the beads are fusing. Depending on the size of the project, additional heating time may be required. **DO NOT OVER-IRON** the beads as it will make the centers of the beads close and can make any assembly you do with your project more challenging.

ASSEMBLY

1. Cut 2 pieces of felt using the pattern at right.




**Pattern:
Cut 2**



2. Apply glue to one long edge of a felt piece. Attach it to the side of the basket as shown. Repeat on the other side. Allow to dry.

Apply glue to the other long edge on each felt piece. Attach to the other basket piece, pushing the felt to the inside of the basket. Allow to dry.

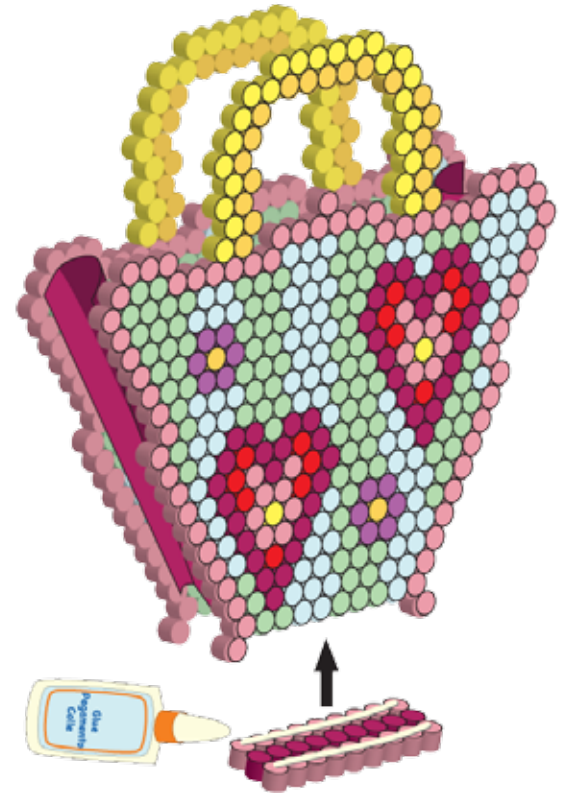

3. Glue the base of the basket in place on the bottom. Allow to dry.

Insert the roses in the basket. If you are giving this for Mother's Day, you can tuck a small gift inside along with the butterfly.