



YOU WILL NEED:

Pegboard:

Large hexagon

Other:

Plastic headband

Pin back


Quick-drying adhesive


Bead Colors:

- Plum - 104
- Purple - 123
- Cheddar - 21
- Kiwi Lime - 81
- Dark Green - 87
- White - 109

Instructions

1. Place your beads on the pegboard as shown. If you are using a clear pegboard, slide the actual-size pattern underneath it.
2. Ask an adult to fuse your designs—see page 2 for further instructions.
3. Assembly: see page 2.

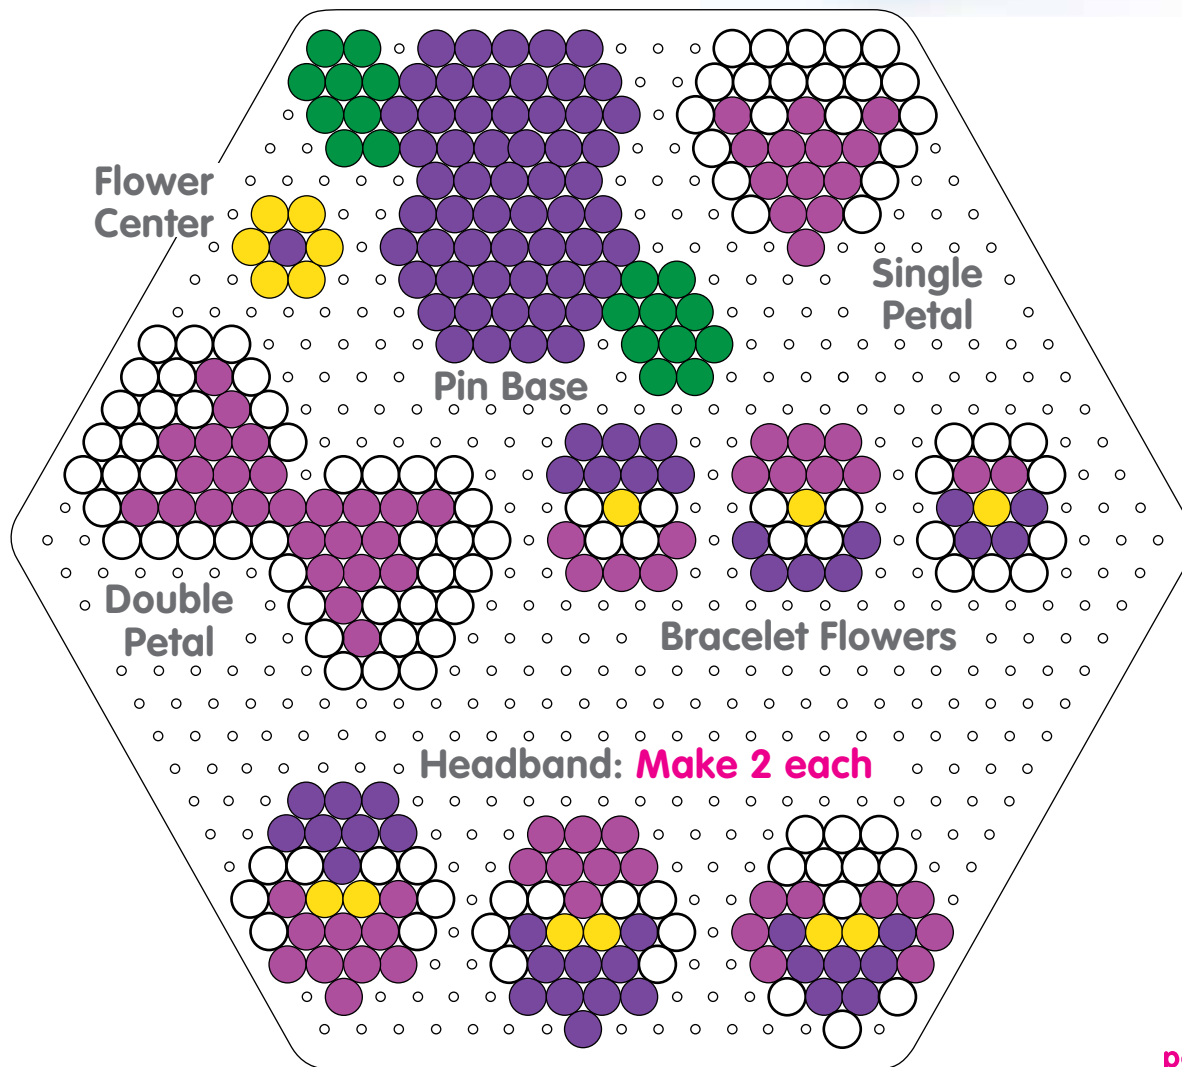

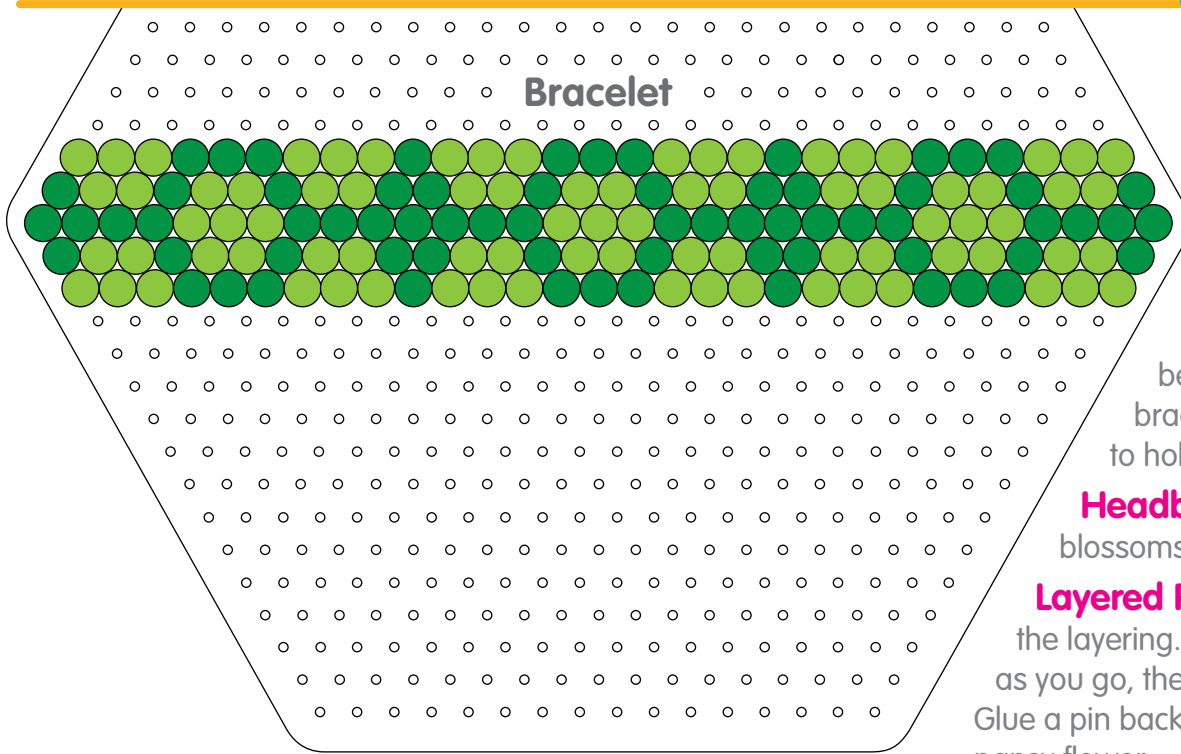


ASSEMBLY

Bracelet: Fuse on **ONE SIDE ONLY**. While the beads are still warm from fusing, curve the bracelet with the fused side facing in. Hold until the beads are cool. **TIP:** Place the bracelet inside the top of a jar to hold its shape until cool.

Headband: Glue the pansy blossoms to the headband.

Layered Pin: See steps 1-3 below for the layering. Glue each piece in place as you go, then let the layered piece dry. Glue a pin back to the reverse side of your pansy flower.

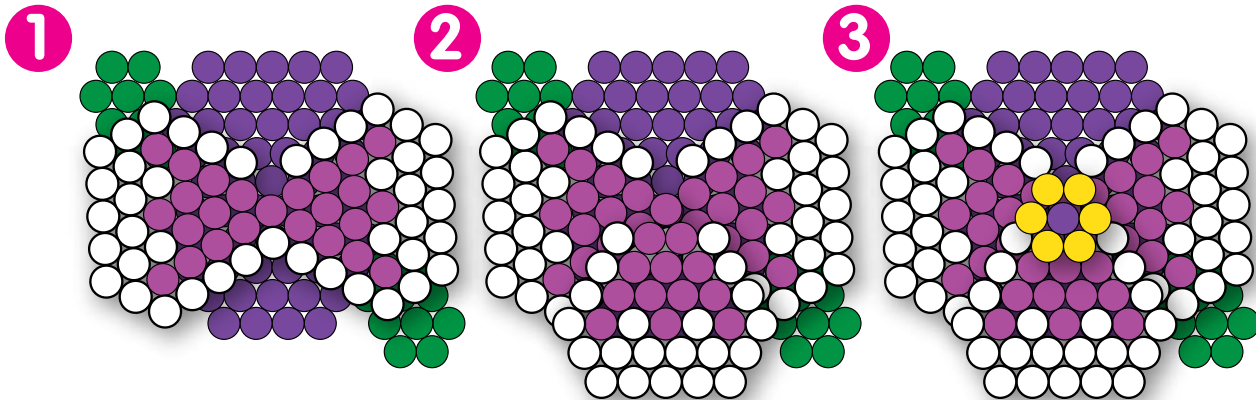

1 Layer the double petal on the base piece.

2 Layer the single petal on the double petal piece.

3 Layer the flower center on the single petal piece.

Fusing Instructions—Only Adults Iron



1. See special fusing instructions above for the bracelet. Place your pegboard on a flat, heat-safe surface.
2. Set a household iron to the medium setting. Place ironing paper over the pegboard. In a circular motion, begin to iron the project. Do not press down with the iron. As the beads begin to fuse, you will see circles of the beads start to show through the paper. When ironed properly, the beads will still have an open center. Let the design cool.
3. Remove the paper and bead design from the pegboard. Flip the design over to expose the non-fused side. Repeat step two. Let cool completely.

NOTE: Beads need heat for about 10-20 seconds per side to fuse evenly. Lift the paper occasionally to see how the beads are fusing. Depending on the size of the project, additional heating time may be required.