



YOU WILL NEED:


- 6 large square pegboards
- Iron and ironing paper
- Scissors and clear tape
- Tweezers
- Two 20" x 14" pieces of sturdy cardboard
- Masking tape (optional)

Bead Colors:


- Light Pink - 41
- Pink - 67
- Plum - 11
- Raspberry - 12
- Red - 89
- Rust - 25
- Cranapple - 66
- Blush - 29
- Butterscotch - 7
- Orange - 24
- Crème - 20
- Pastel Yellow - 39
- Yellow - 44
- Cheddar - 27
- Prickly Pear - 67
- Kiwi Lime - 45
- Pastel Green - 41
- Green - 36
- Dark Green - 18
- Toothpaste - 39
- Turquoise - 13
- Pastel Blue - 18
- Light Blue - 32
- Dark Blue - 38
- Blueberry Cream - 20
- Periwinkle Blue - 22
- Pastel Lavender - 11
- Purple - 20
- Light Grey - 129
- Grey - 70
- Dark Grey - 56
- Black - 7
- White - 639

Instructions

1. Assemble 6 large square pegboards as shown to create your project, placing them on one of the large pieces of cardboard on a heat-safe surface that you can later use for fusing. Cut out and tape together the pattern sections. If you are using clear pegboards, slide the actual-size pattern underneath them. Place your beads following the pattern.

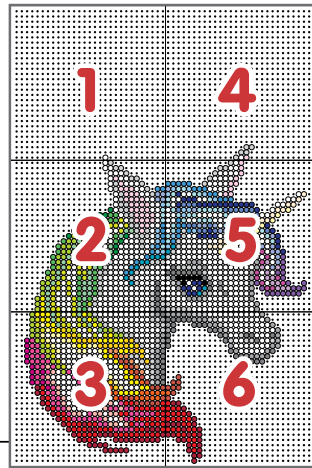


Sections 1 & 2

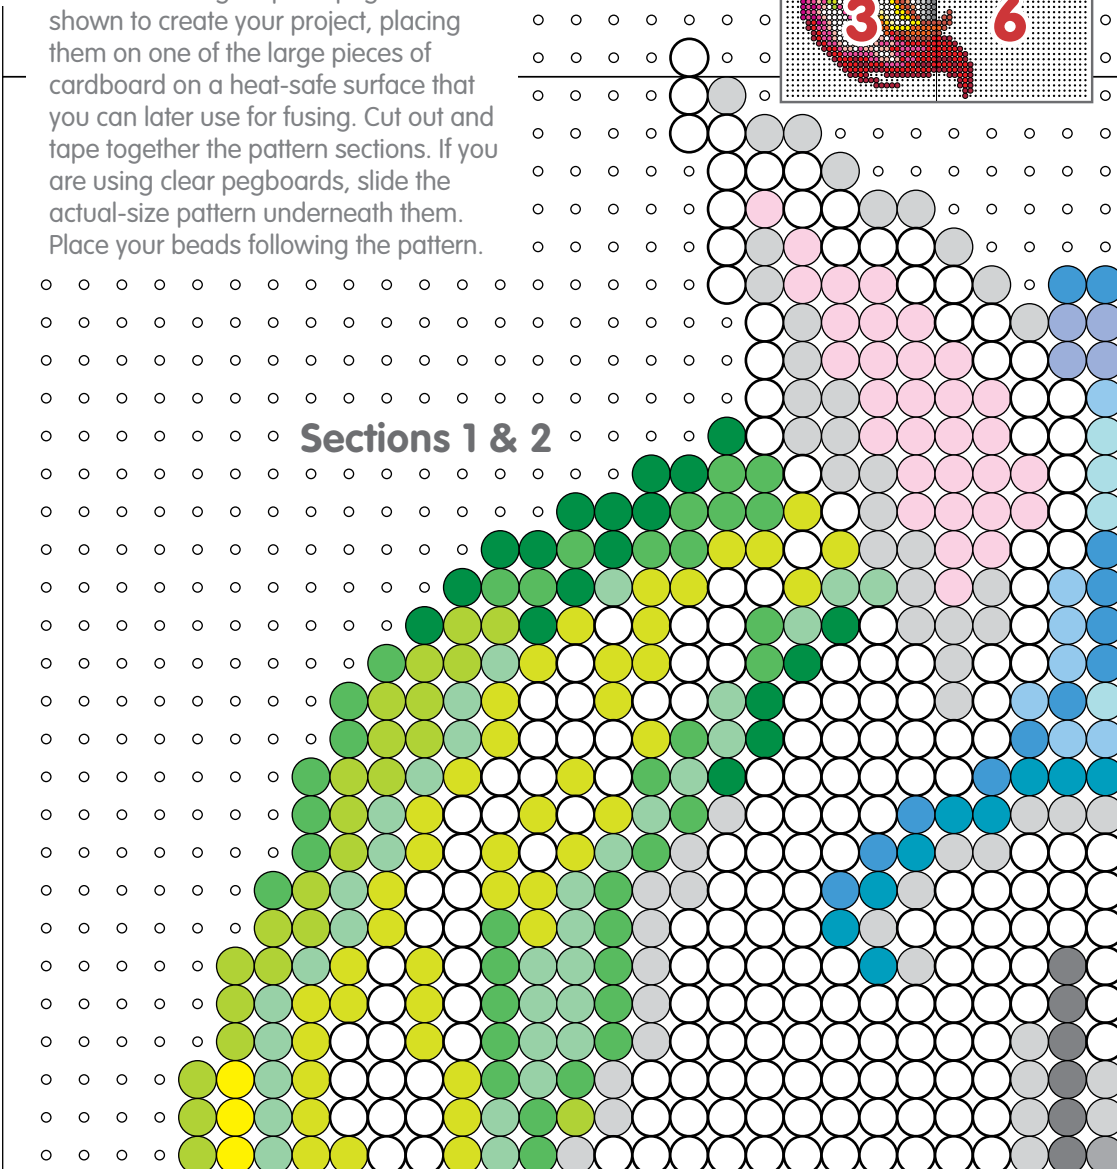


Instructions (cont.)

2. Ask an adult to fuse your designs—you can use our Standard Fusing Method explained here, or for large projects on multiple pegboards such as this, you might prefer to use the Tape Method for Fusing Large Projects. See page 4 for our standard instructions. For the Tape Method instructions, please visit www.perler.com.


Section 3

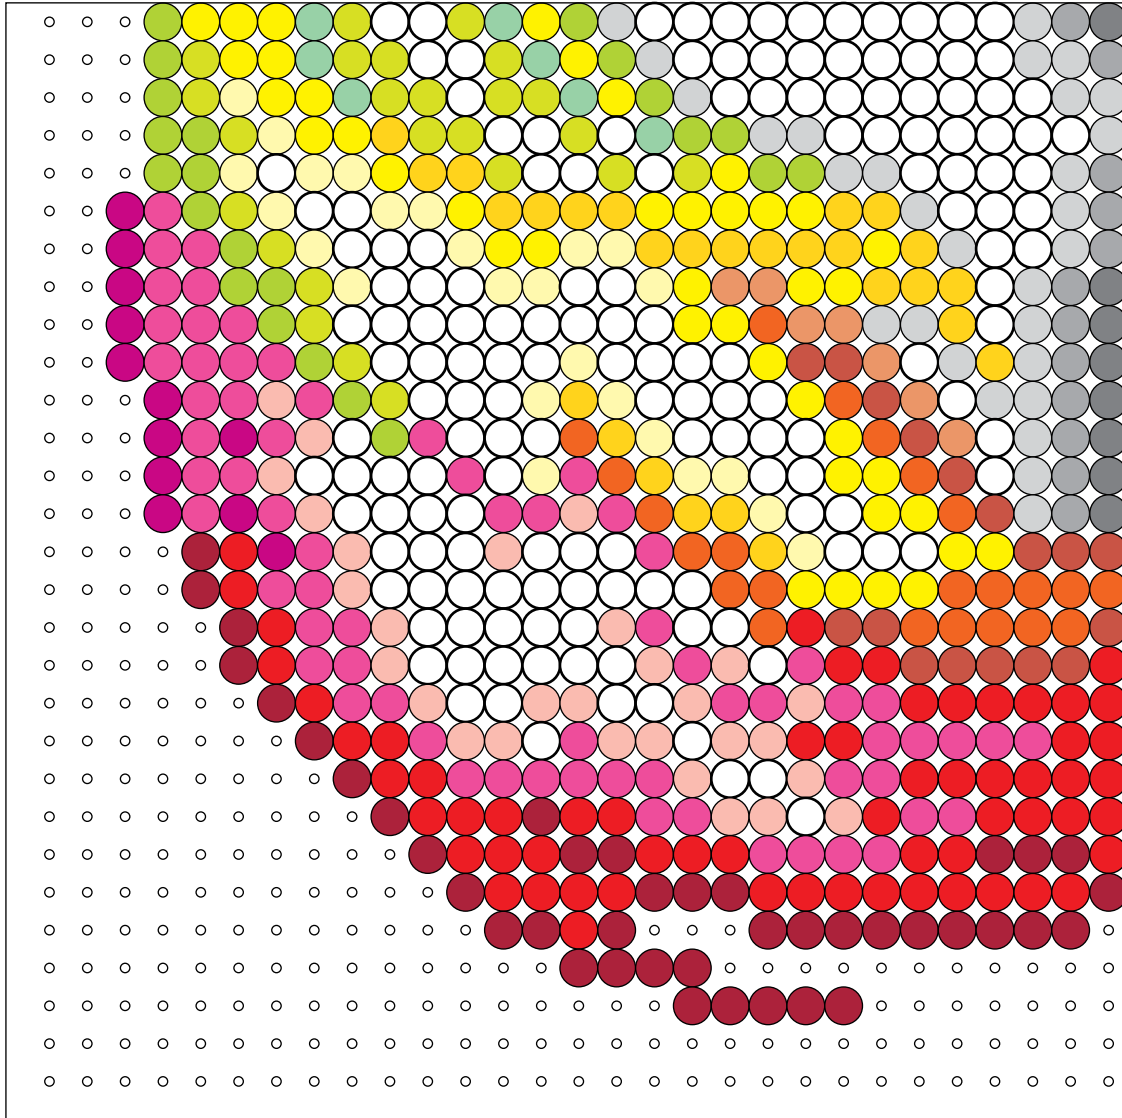

Sections 4 & 5

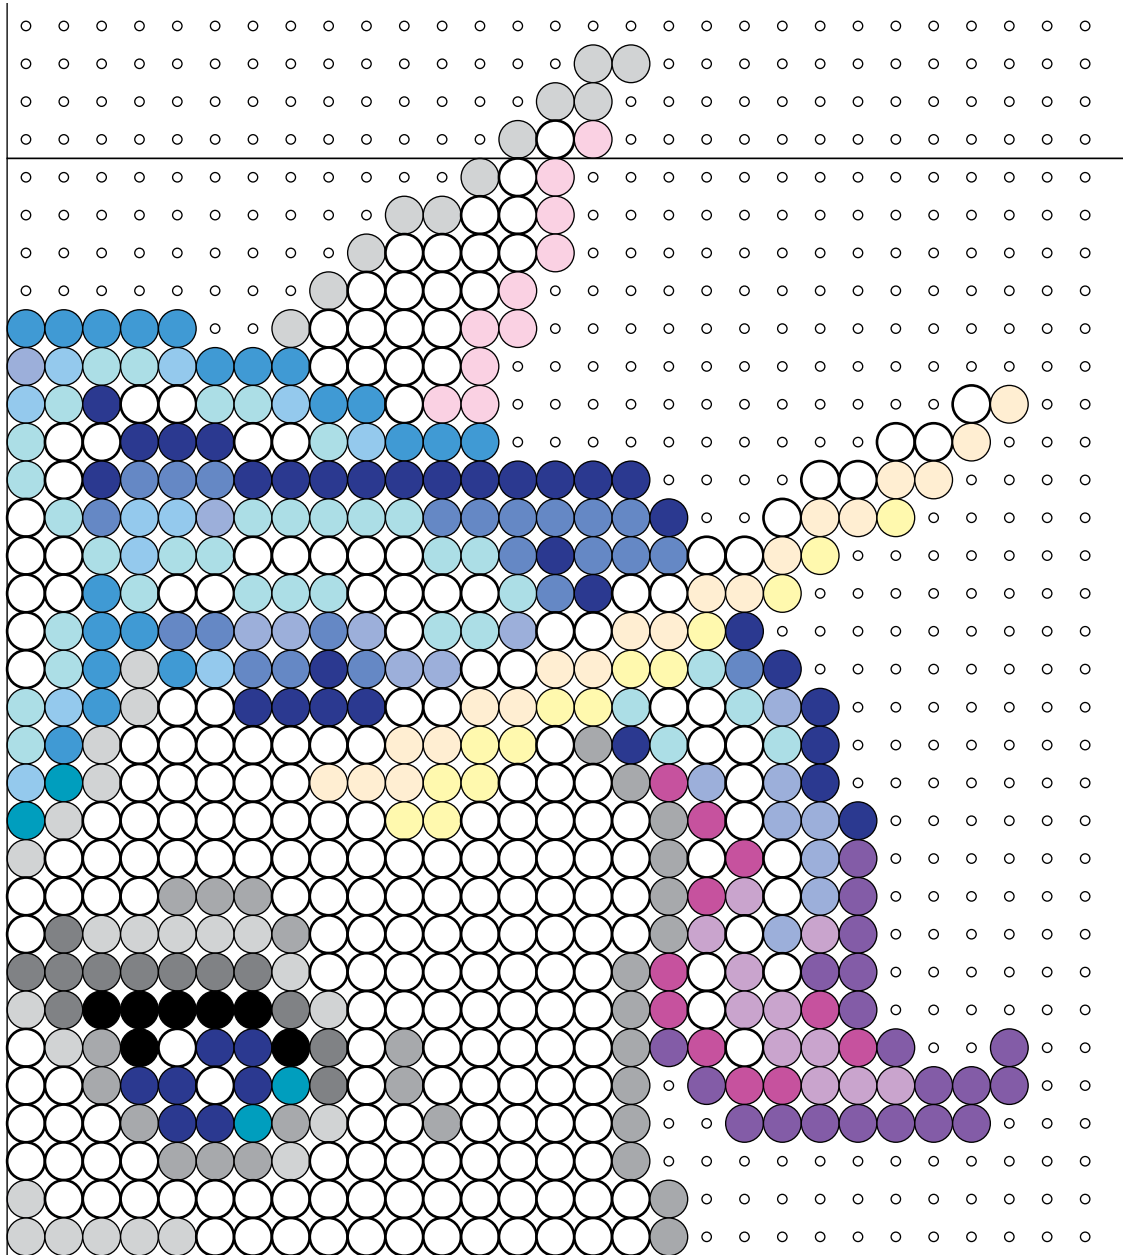

Section 6

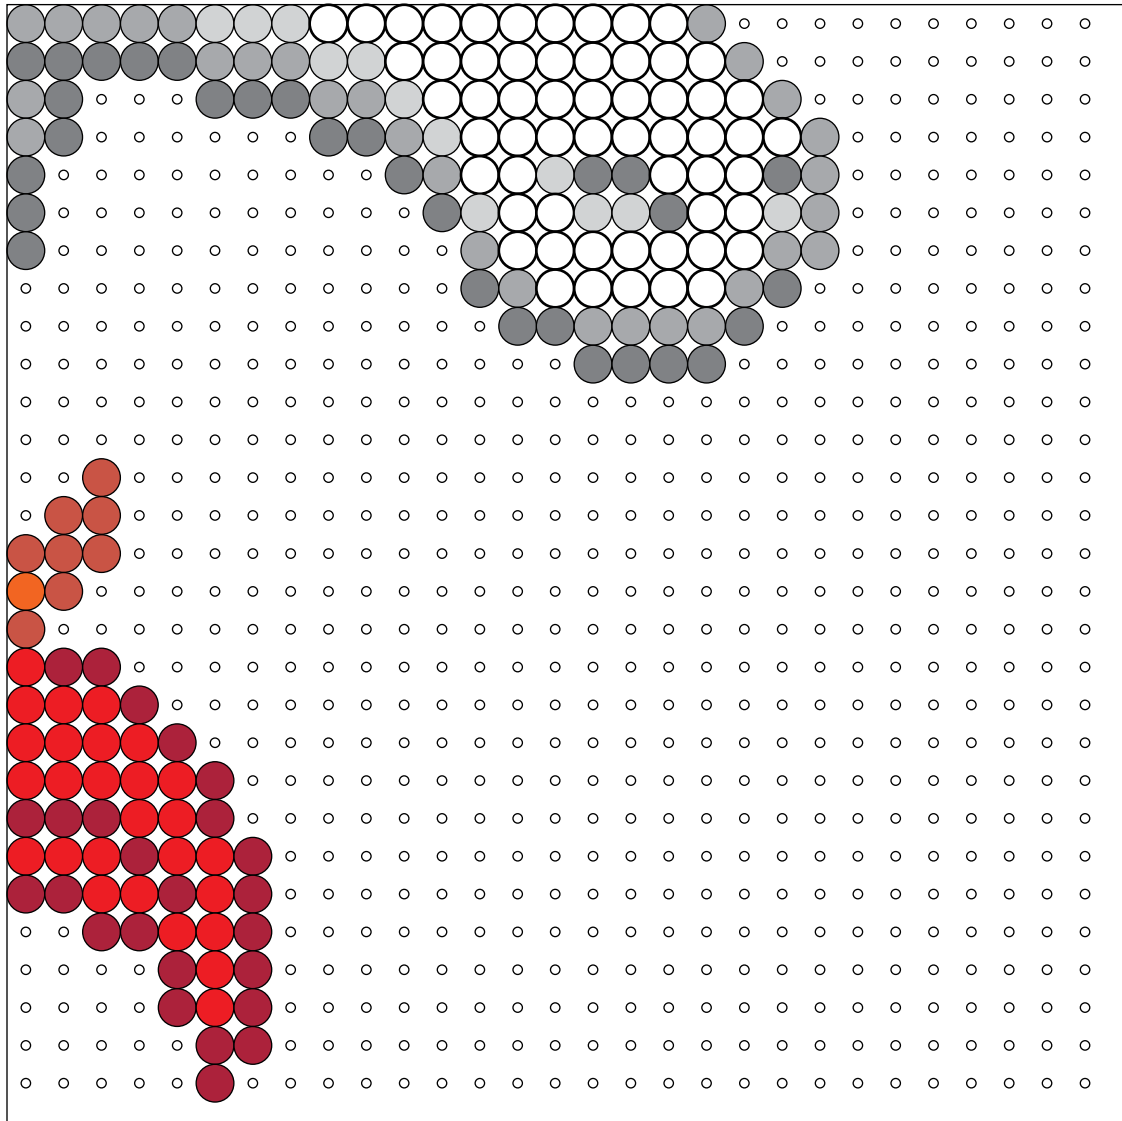Fusing Instructions—**Only Adults Iron**

1. Place your pegboard on a flat, heat-safe surface.
2. Set a household iron to the medium setting. Place ironing paper over the pegboard. In a circular motion, begin to iron the project. Do not press down with the iron. As the beads begin to fuse, you will see circles of the beads start to show through the paper. When ironed properly, the beads will still have an open center. Let the design cool.
3. Remove the paper and bead design from the peg board. Flip the design over to expose the non-fused side. Repeat step two. Let cool completely. Your pegboard and ironing paper are reusable.

NOTE: Beads need heat for about 10-20 seconds per side to fuse evenly. Lift the paper occasionally to see how the beads are fusing. Depending on the size of the project, additional heating time may be required.