

South of the Equator



YOU WILL NEED:

Bead Colors:


- Red
- Light Brown
- Green
- Brown
- Dark Green
- Black
- Tan
- White

Pegboards:

- Large Hexagon
- Large Square


Instructions

1. Place your beads on the pegboards as shown. If you are using a clear pegboard, slide the actual-size pattern underneath it.
2. Ask an adult to fuse your designs—see Fusing Instructions on page 4.
3. **Assembly:** The crocodile, Aborigine, and kangaroo all have stands. For the crocodile, insert both feet into the stand. For the Aborigine, insert the lower foot into the stand. For the kangaroo, insert his feet into one stand and his tail into the other.
4. If you want, you can paint a scene like we did to show off your new friends!

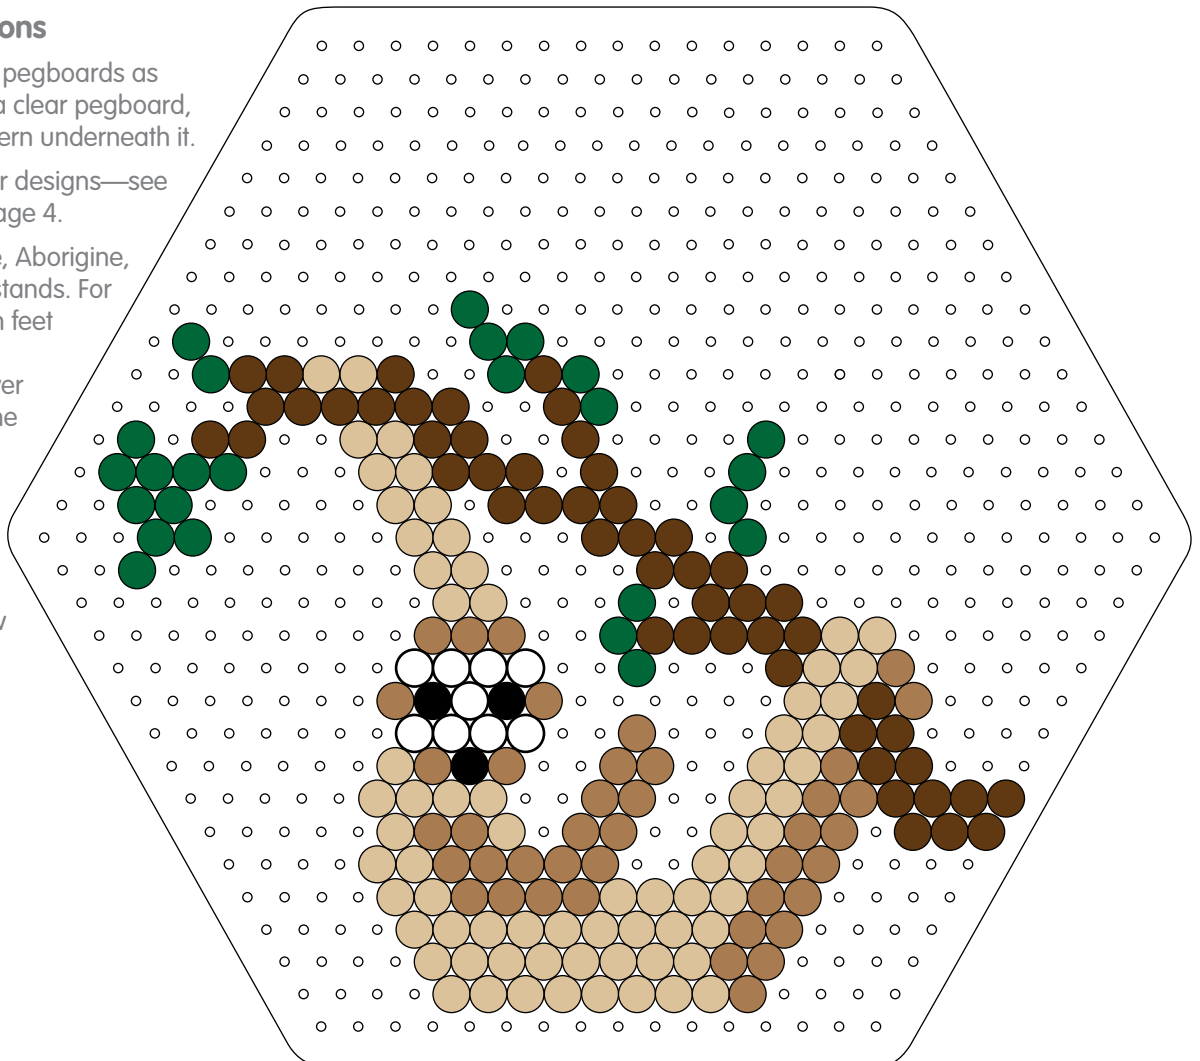





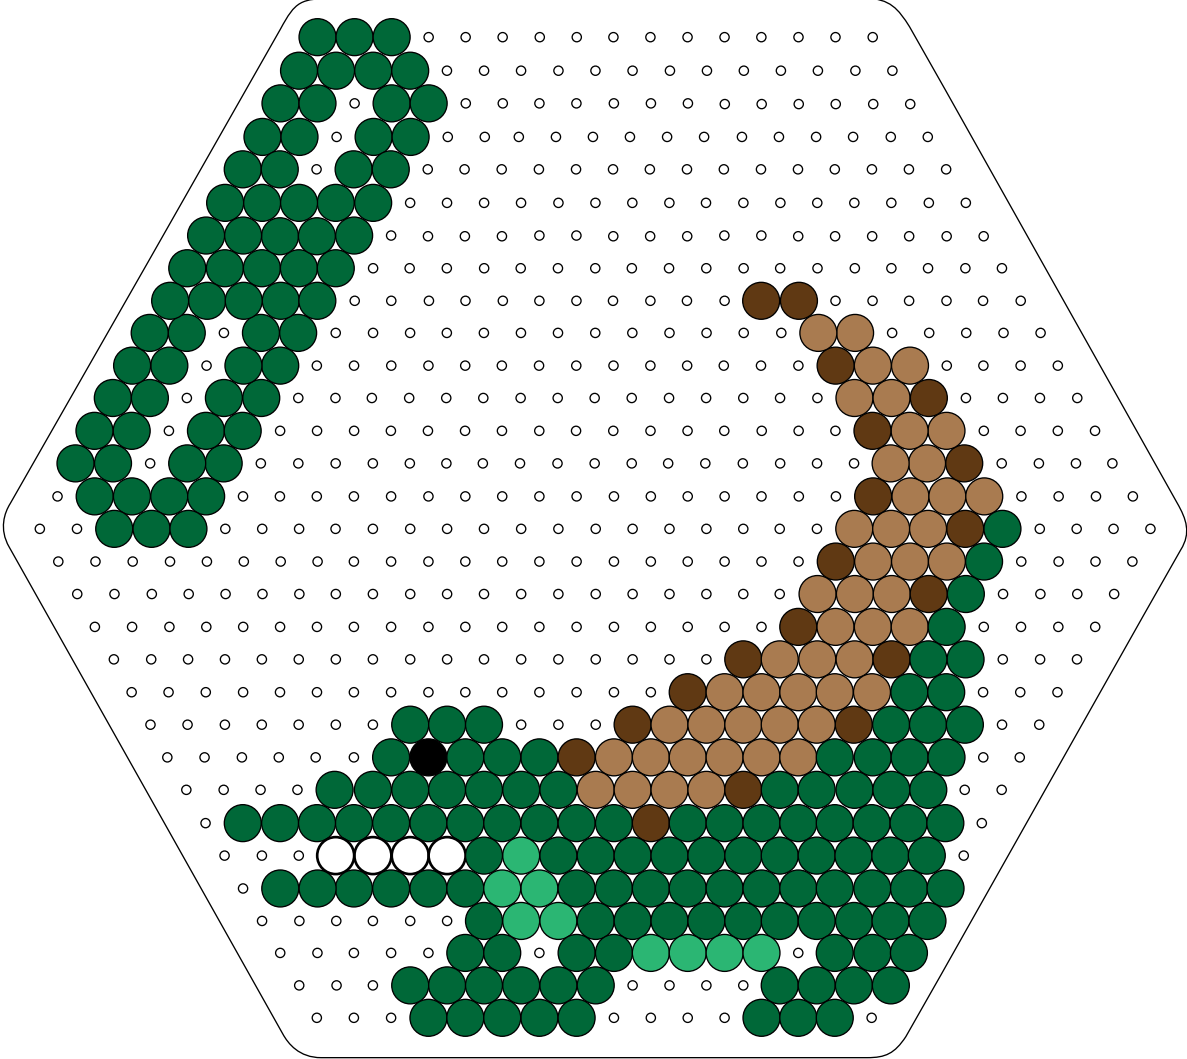


Bead Color/# Needed:

- Dark Green - 25
- Tan - 70
- Light Brown - 41
- Brown - 51
- Black - 3
- White - 9





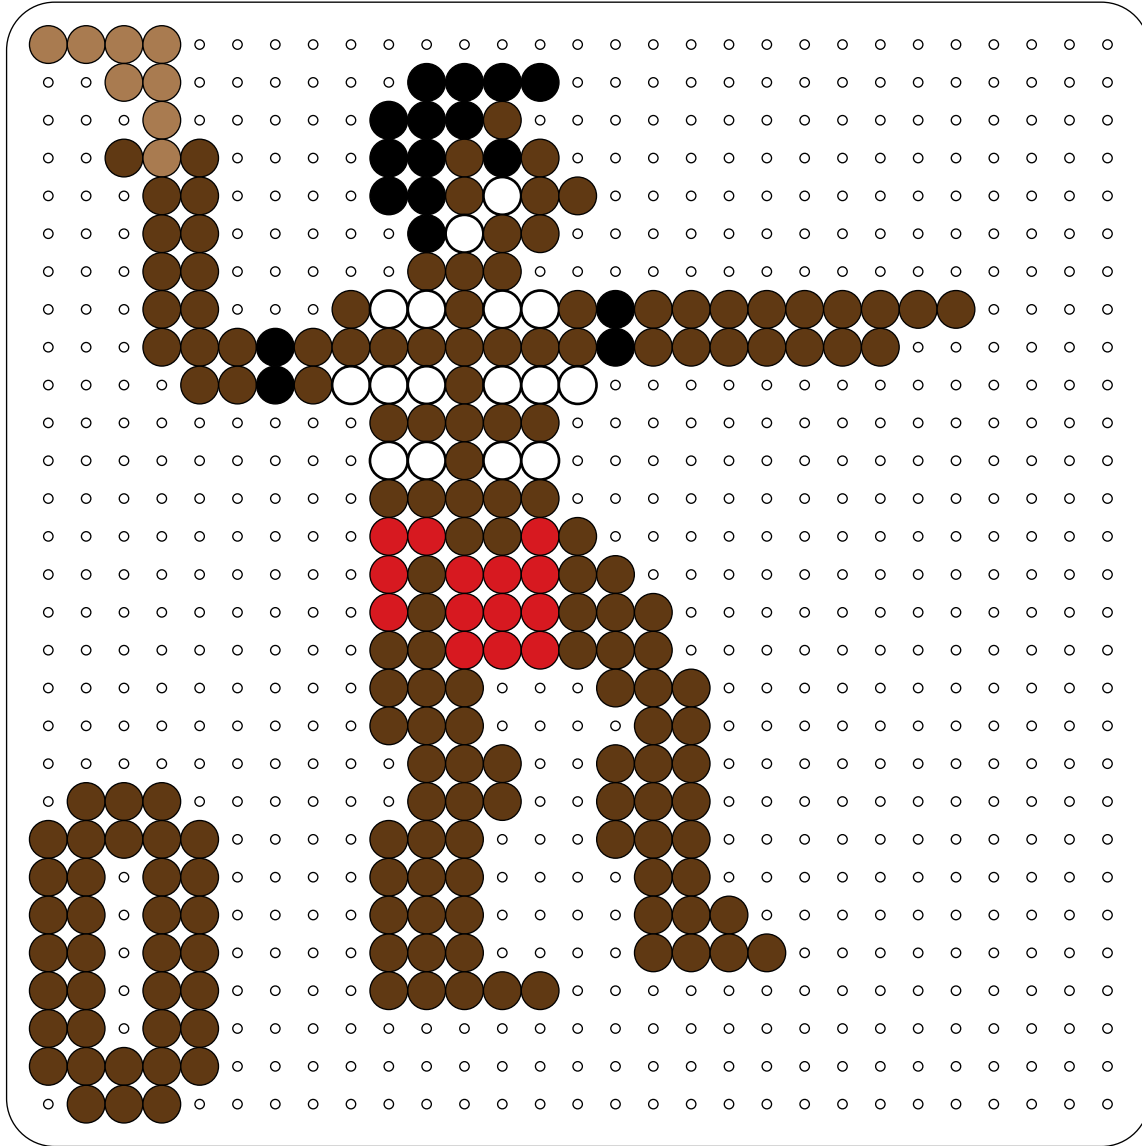


Bead Color/# Needed:





-  Green - 9
-  Dark Green - 184
-  Light Brown - 48
-  Brown - 19
-  Black - 1
-  White - 4




Bead Color/# Needed:

-  Red - 14
-  Light Brown - 8
-  Brown - 169
-  Black - 17
-  White - 16

Bead Color/# Needed:

-  Tan - 9
-  Light Brown - 146
-  Brown - 152
-  White - 2

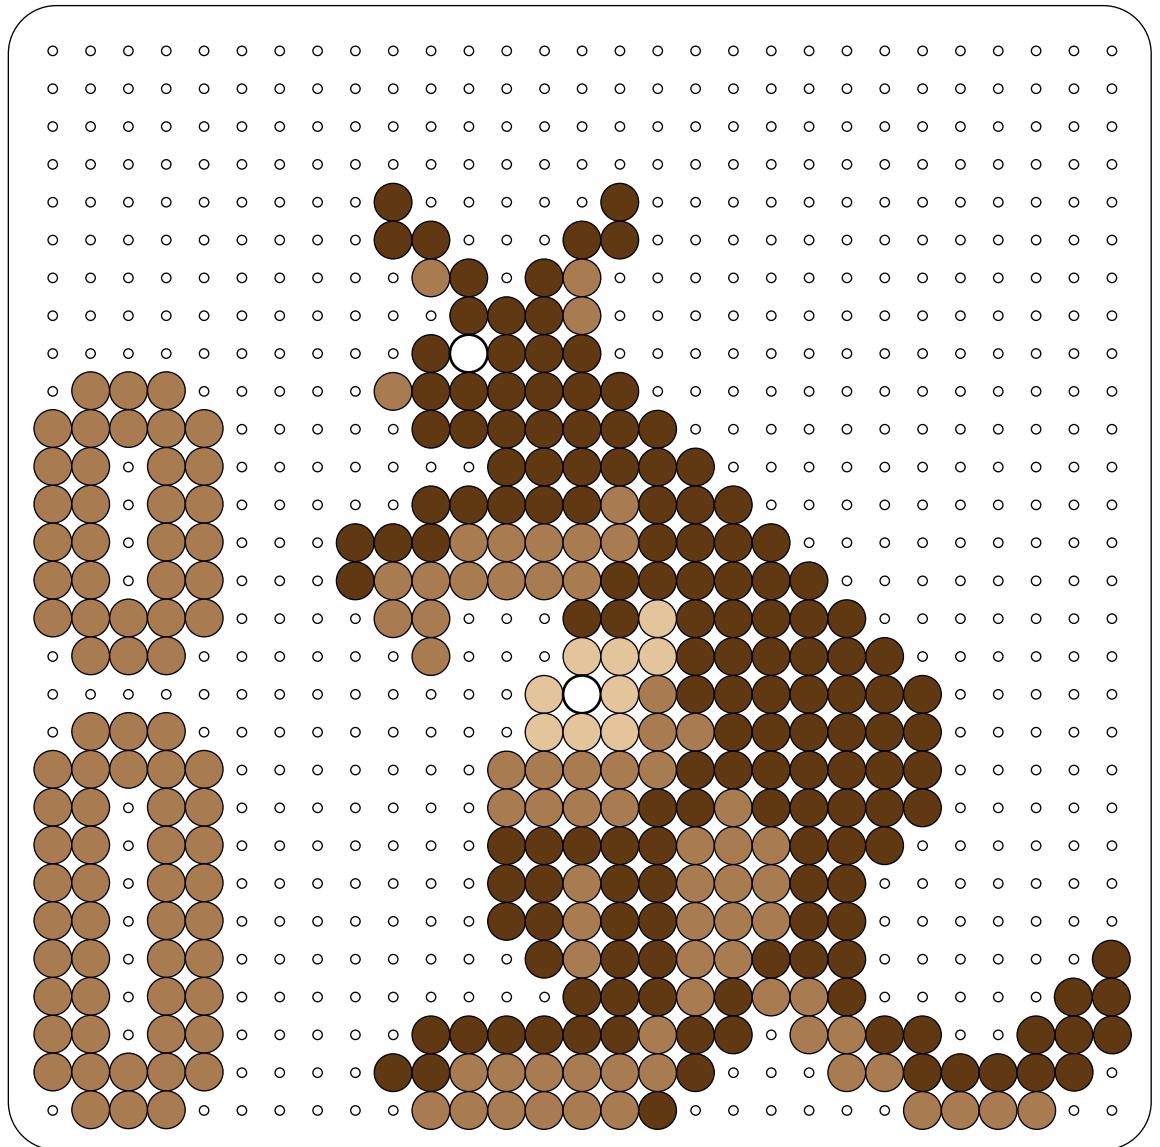

Fusing Instructions—Only Adults Iron



1. Place your pegboard on a flat, heat-safe surface.
2. Set a household iron to the medium setting. Place ironing paper over the pegboard. In a circular motion, begin to iron the project. When ironed properly, the beads will still have an open center. Let the design cool.
3. Remove the paper and bead design from the pegboard. Flip the design over to expose the non-fused side. Repeat step two. Let cool completely.

Note: Beads need heat for about 10-20 seconds per side to fuse evenly. Depending on the size of the project, additional heating time may be required. For this 3-D project, DO NOT OVER-IRON the beads as it will make the centers of the beads close and can make assembly more challenging.