
page 1

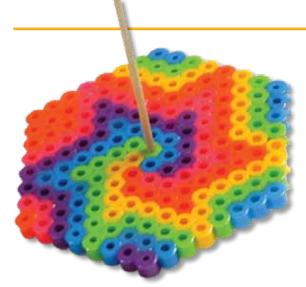

## Instructions

- 1. Use the small hexagon pegboard for your project. If you're using a clear pegboard, slide the actual-size pattern underneath it. Place all the beads for the design.
- 2. Cover the completed design with the ironing paper. Keeping the iron level, gently iron the beads in a circular motion for about 10 seconds to fuse the beads evenly. Ironed properly, the beads will still have an open center. DO NOT OVER-IRON the beads as it will make the centers of the beads close and can make insertion of the toothpick difficult.
- 3. Once the design is cool, peel off the ironing paper. Lift your design from the pegboard; flip the design over and repeat step #2. Your pegboard and ironing paper are reusable.

You will also need a toothpick and heavy scissors.

