



Summer Cabin




Ironing Instructions

Beads should be fused together with a **dry** household iron by an **adult** only. Please keep children at a safe distance.





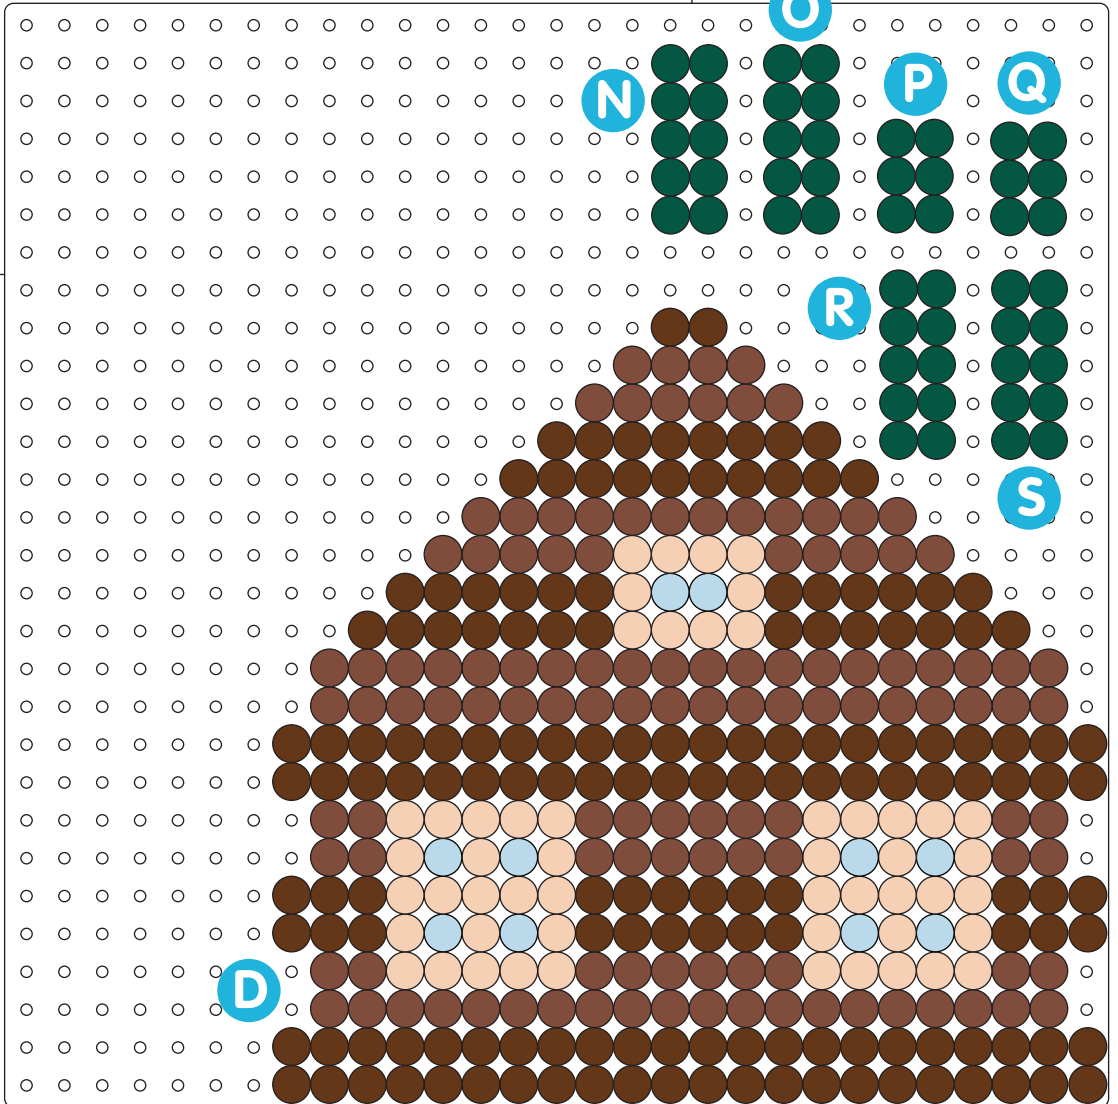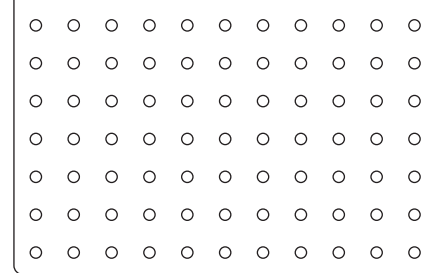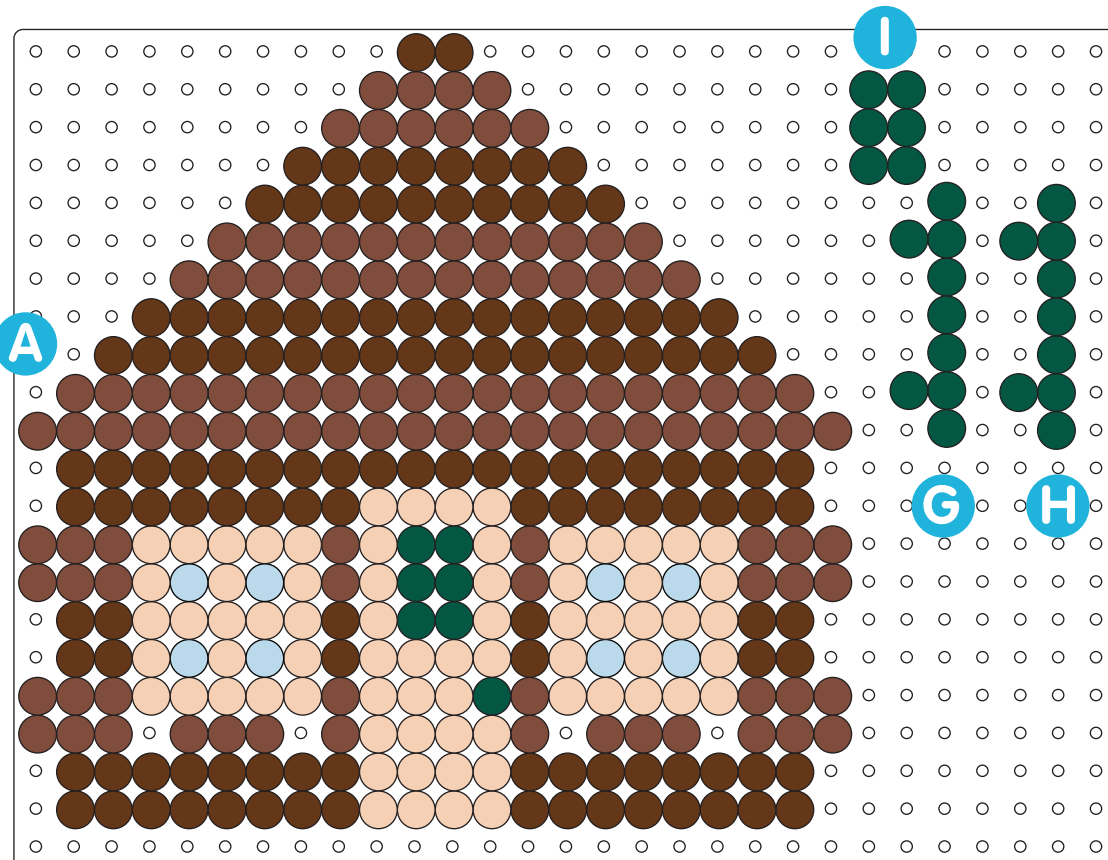


1. Place pegboard on flat, heat-safe surface.
2. Set iron to medium. Place ironing paper over beads and pegboard. Using a circular motion, iron for about 10-20 seconds. Do not press down on the iron. When ironed properly, beads will still have an open center. Let cool.
3. Remove ironing paper and bead design from pegboard. Flip design over to expose the non-fused side. Place ironing paper over design and iron again. To prevent bead design from warping, place a heavy book on design as it cools.



Note: Do not place iron directly against beads or pegboard. Pegboard is not designed for use in any type of oven; it will warp.




Pegboard and ironing paper are reusable.






Summer Cabin & Pine Trees

Robin's Egg		x 26
Sand		x 165
Sage		x 529
Evergreen		x 1028
Brown		x 524
Gingerbread		x 418
Lt Brown		x 184

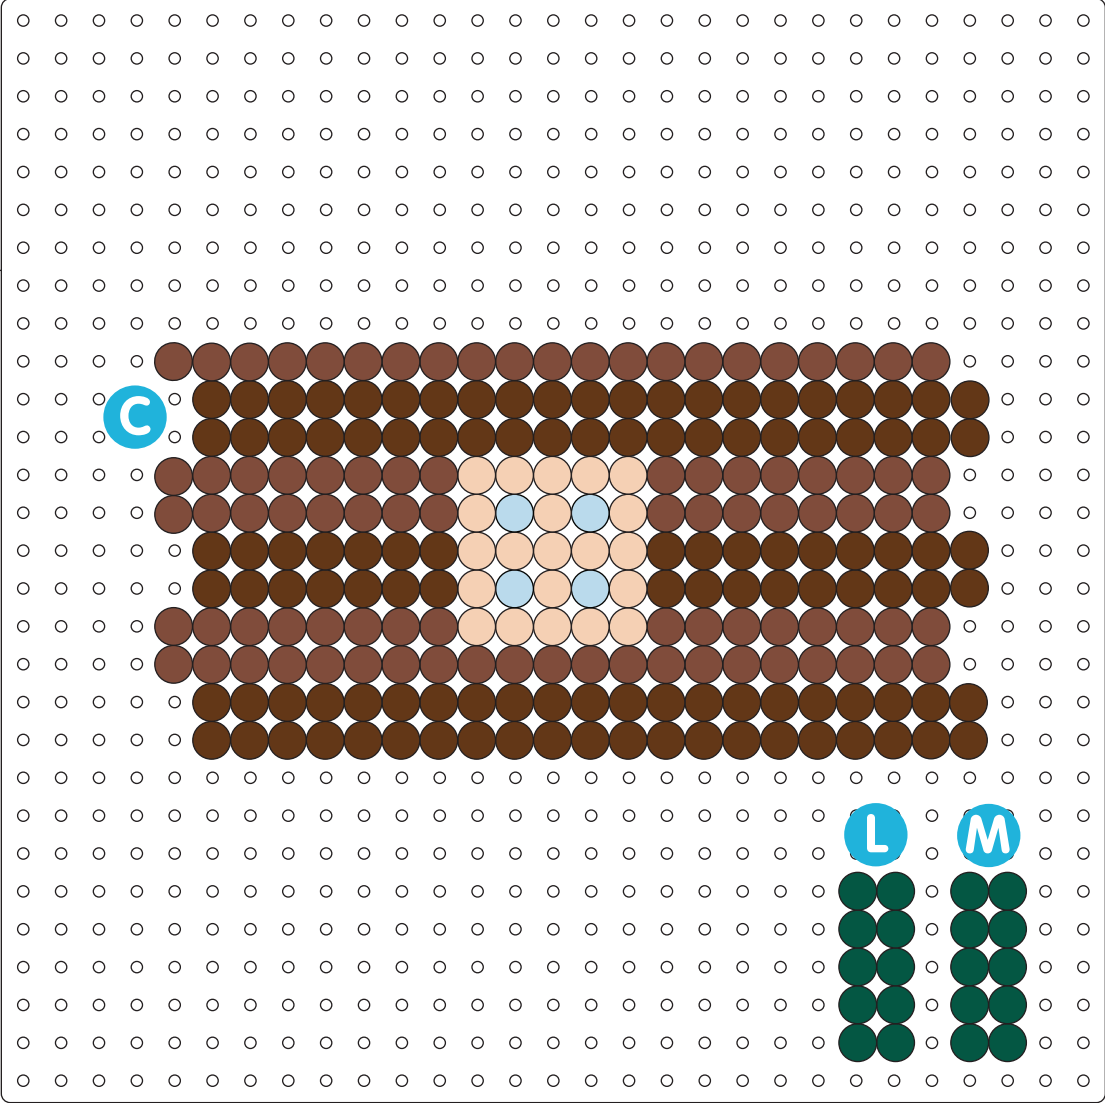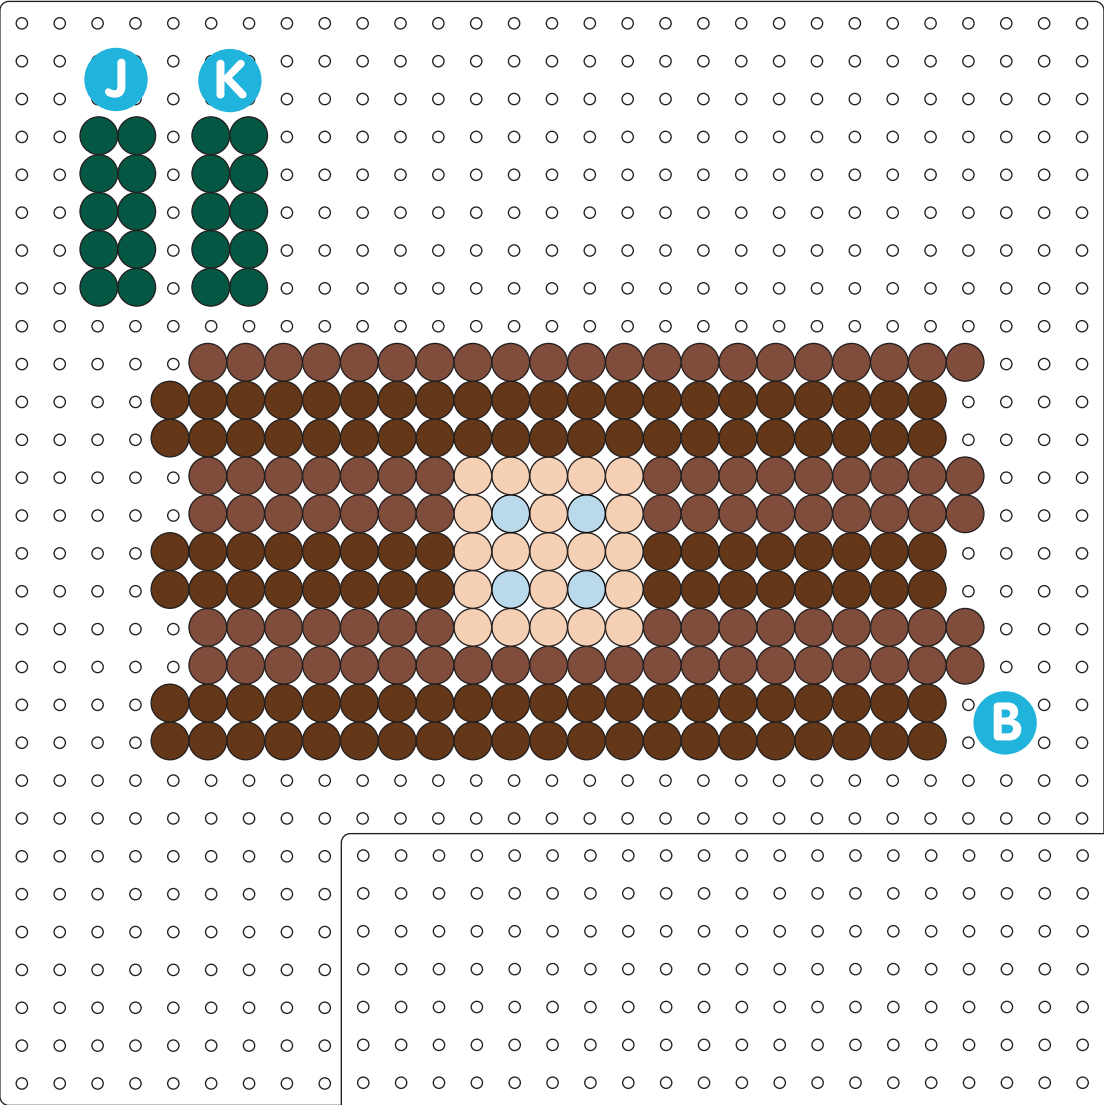

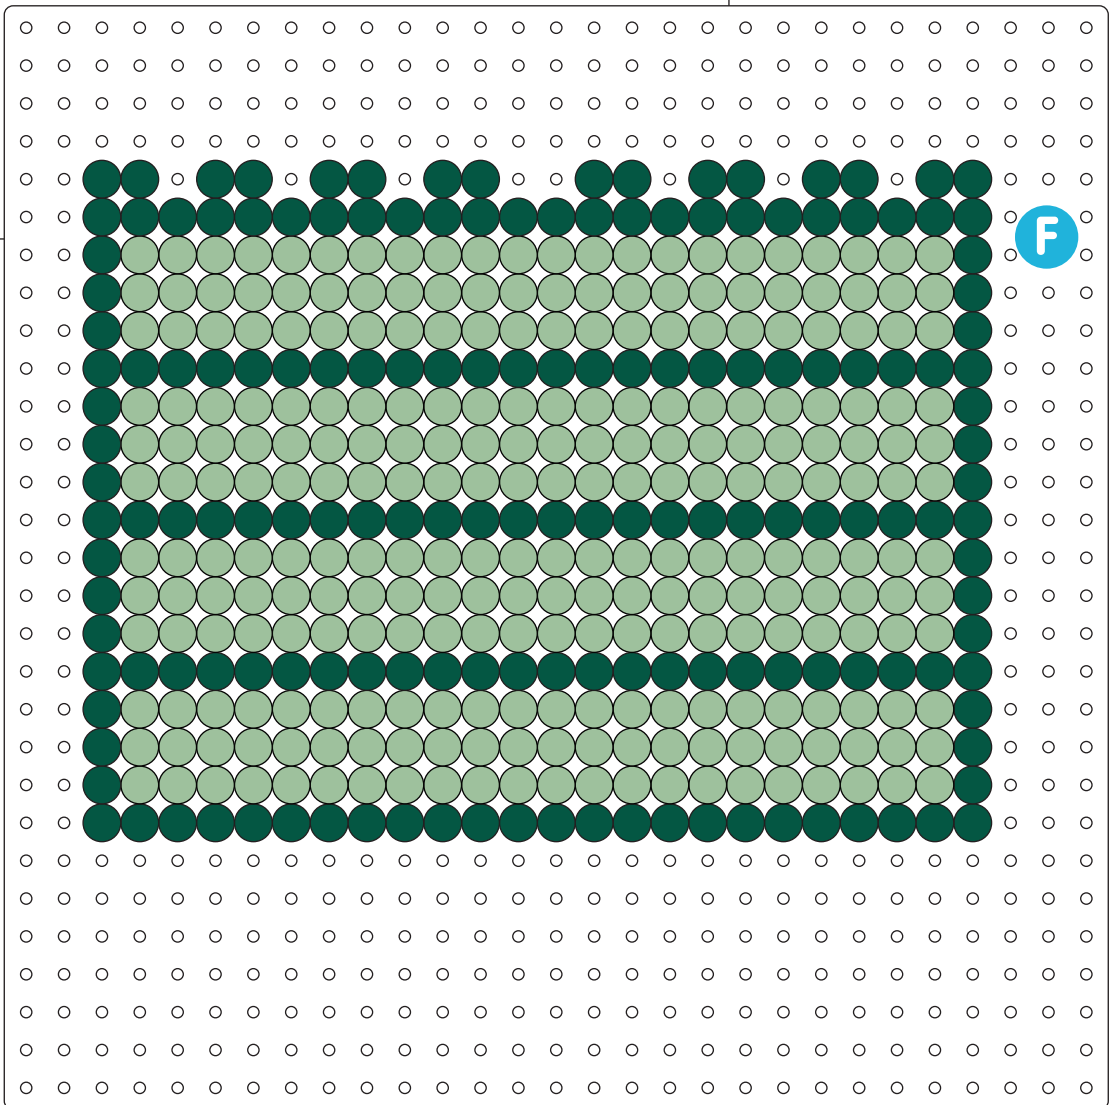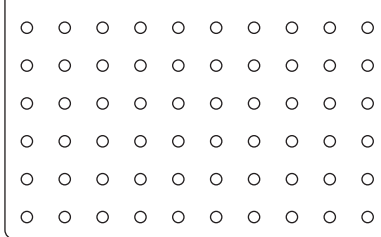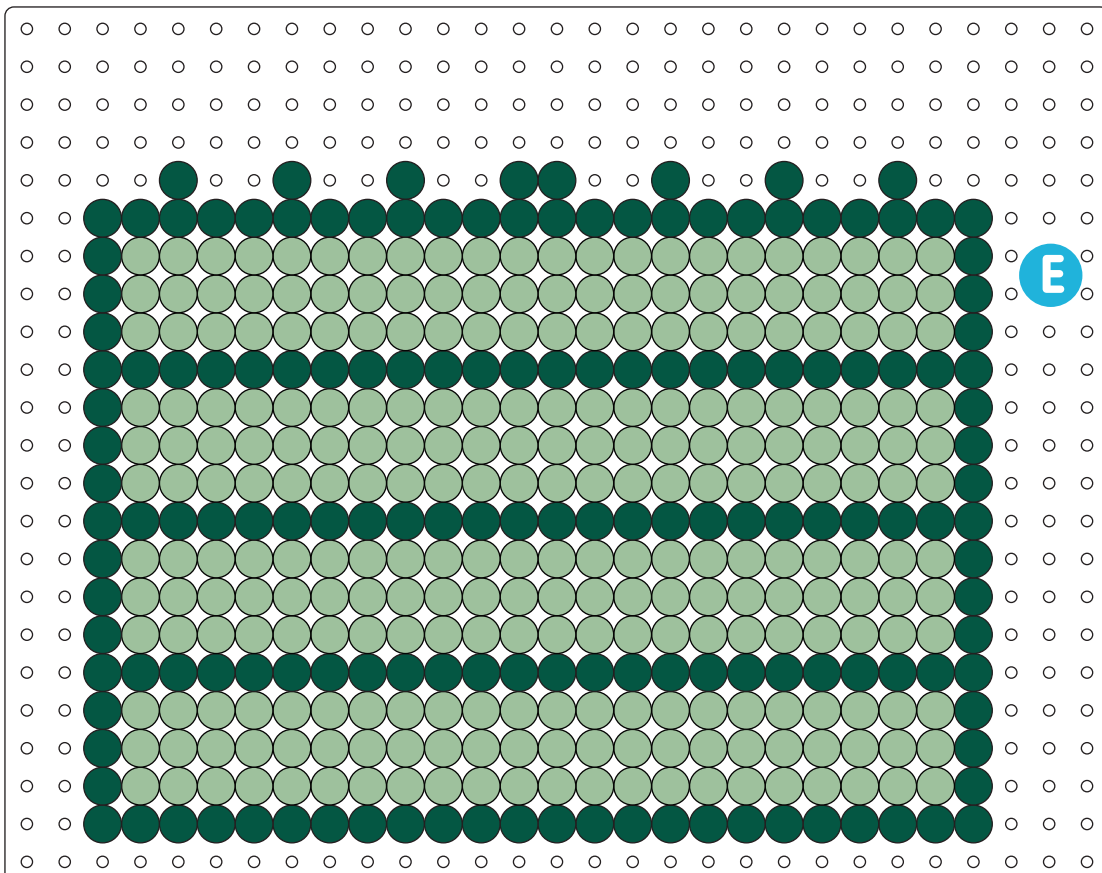

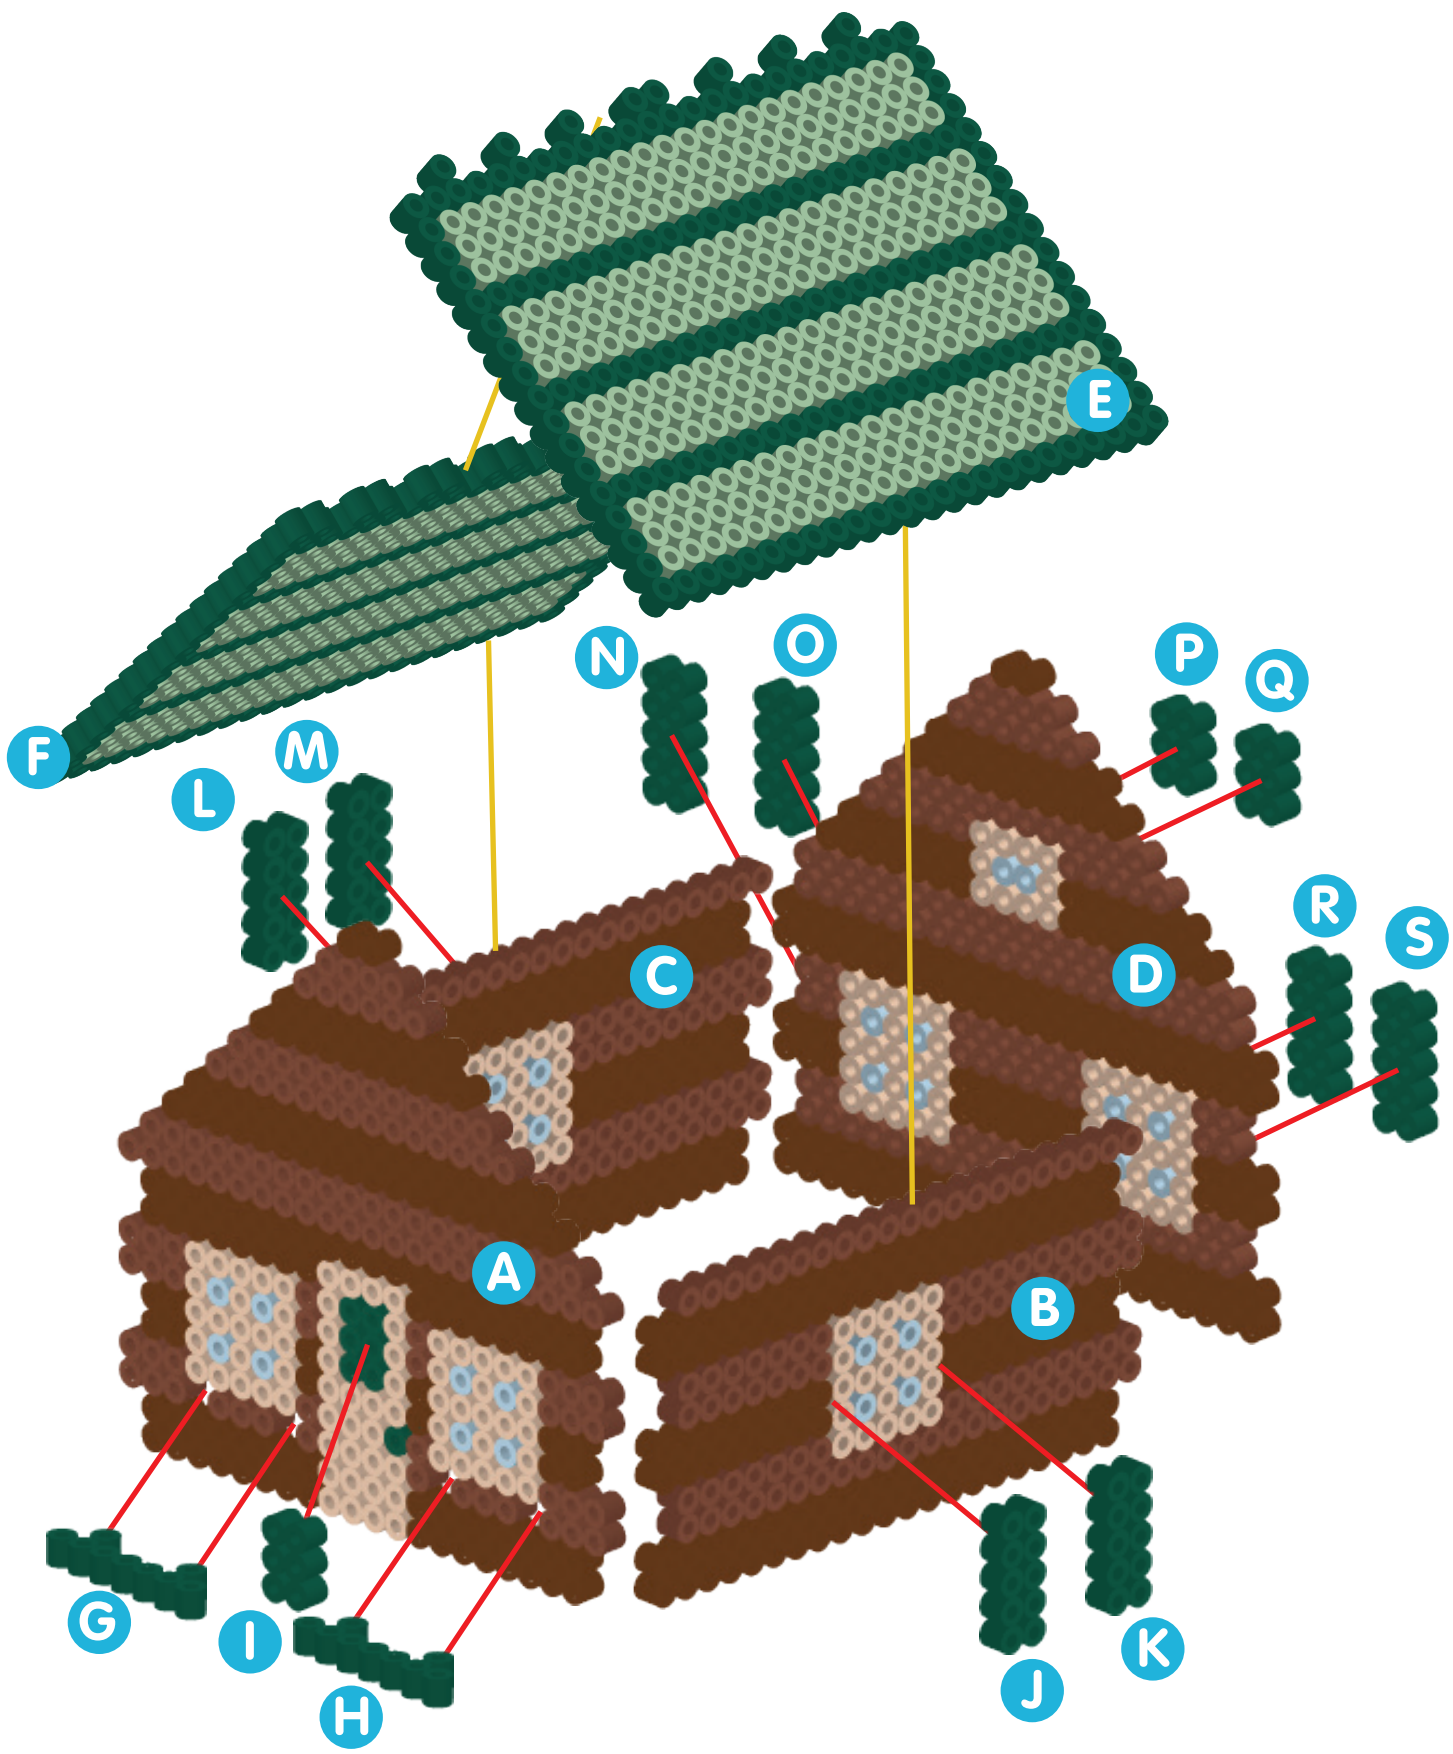

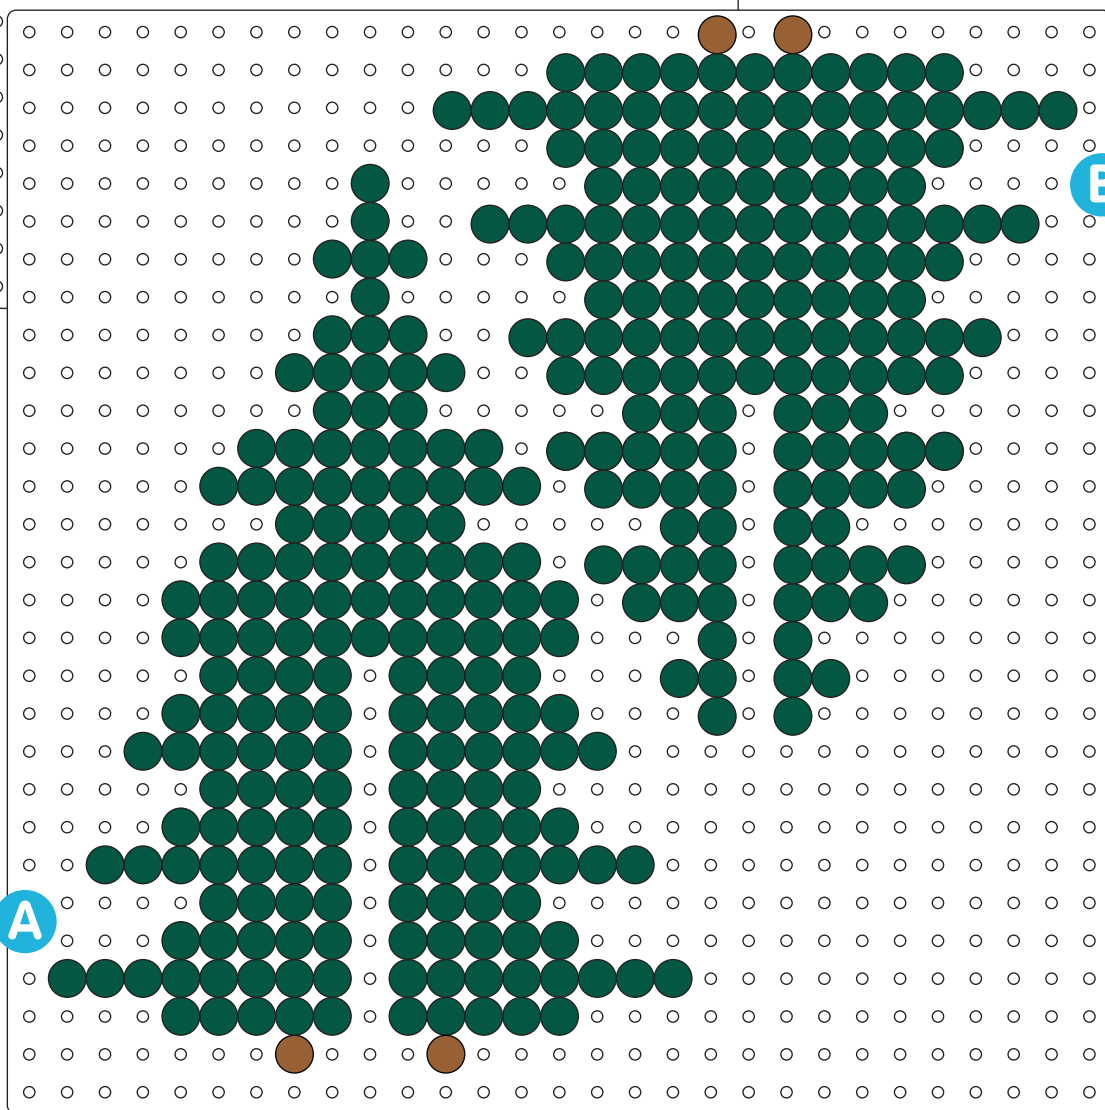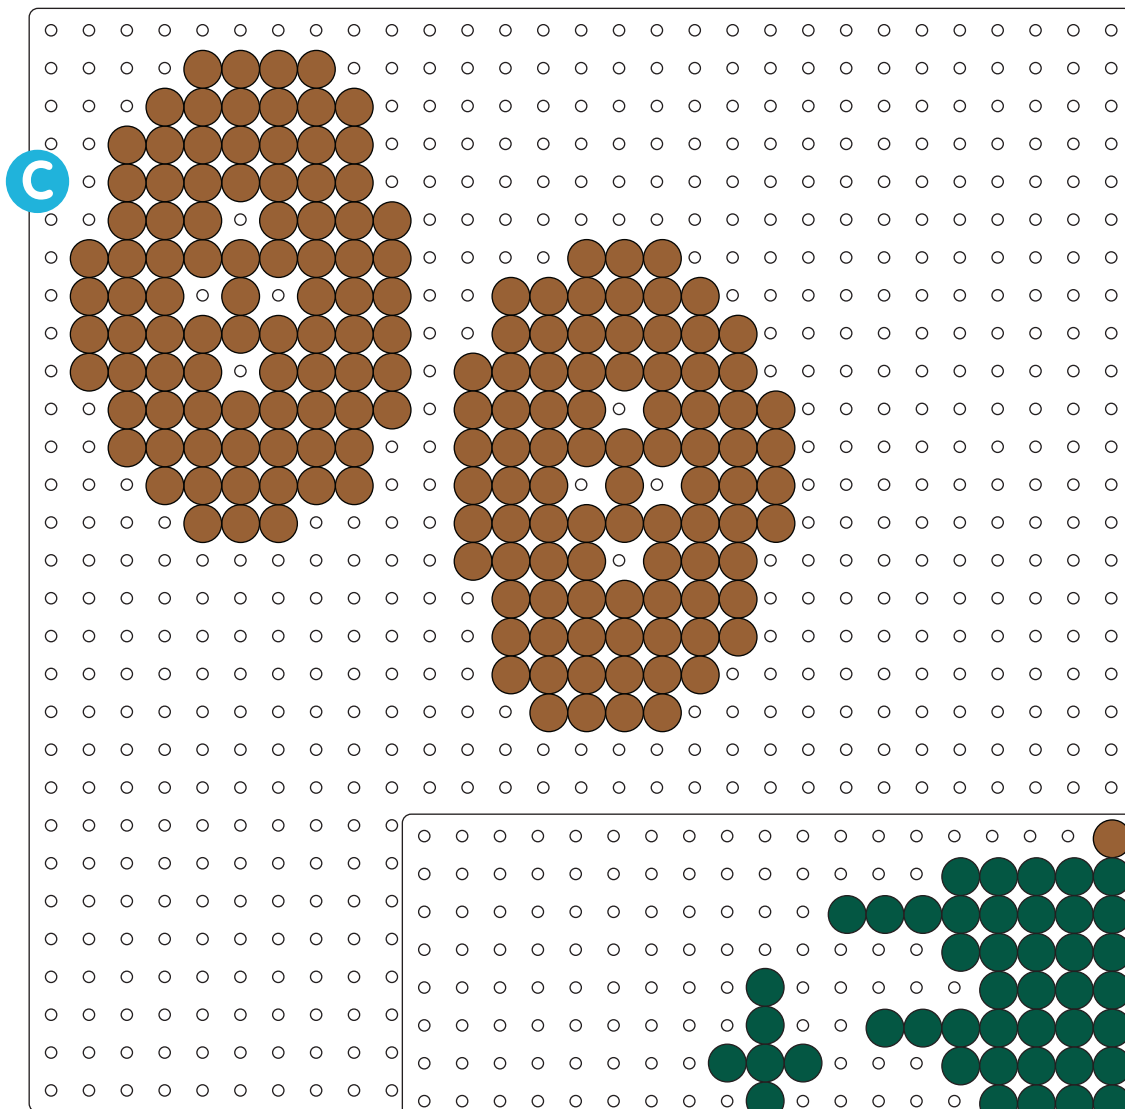

A

